




AIRLESS PAINT SPRAYER



Operating Instruction

DP- X Series

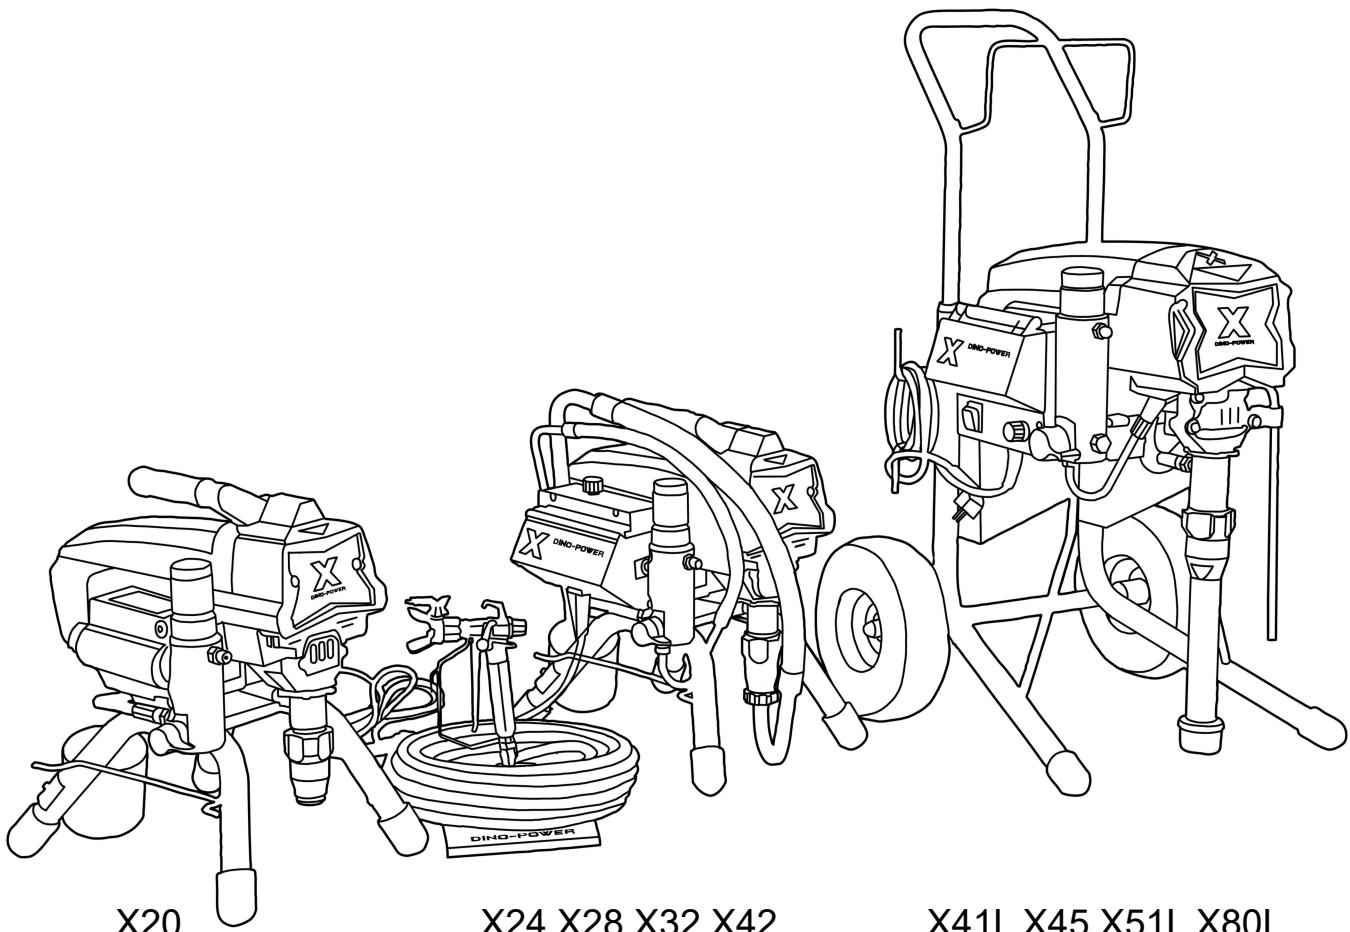

Please read and keep this manual. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instruction for future reference.



AIRLESS PAINT SPRAYER



WARNING



FIRE AND EXPLOSION HAZARD

Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:

- Do not spray flammable or combustible materials near an open flame or sources of ignition such as cigarettes, motors, and electrical equipment.
- Paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent fumes. All parts of the spray system, including the pump, hose assembly, spray gun, and objects in and around the spray area shall be properly grounded to protect against static discharge and sparks. Use DINO-POWER conductive or grounded high-pressure airless paint sprayer hoses.
- Verify that all containers and collection systems are grounded to prevent static discharge.
- Connect to a grounded outlet and use grounded extensions cords. Do not use a 3-to-2 adapter.
- Do not use a paint or a solvent containing halogenated hydrocarbons.
- Keep spray area well-ventilated. Keep a good supply of fresh air moving through the area. Keep pump assembly in a well ventilated area. Do not spray pump assembly.
- Do not smoke in the spray area.
- Do not operate light switches, engines, or similar spark producing products in the spray area.
- Keep area clean and free of paint or solvent containers, rags, and other flammable materials.
- Know the contents of the paints and solvents being sprayed. Read all Material Safety Data Sheets (MSDS) and container labels provided with the paints and solvents. Follow the paint and solvents Manufacturer's safety instructions.
- Fire extinguisher equipment shall be present and working

Sprayer generates sparks. When flammable liquid is used in or near the sprayer or for flushing or

- Keep sprayer at least 20 feet (6 m) away from explosive vapors.



ELECTRIC SHOCK HAZARD

This equipment must be grounded. Improper grounding, set up, or usage of the system can cause electric shock.

- Turn off and disconnect power cord before servicing equipment.
- Use only grounded electrical outlets.
- Use only 3-wire extension cords.
- Ensure ground prongs are intact on power and extension cords.
- Do not expose to rain. Store indoors.



SKIN INJECTION HAZARD

High-pressure spray is able to inject toxins into the body and cause serious bodily injury. In the event that injection occurs, get immediate surgical treatment.

- Do not aim the gun at, or spray any person or animal.
- Keep hands and other body parts away from the discharge. For example, do not try to stop leaks with any part of the body.
- Always use the nozzle tip guard. Do not spray without nozzle tip guard in place.
- Use DP nozzle tips.
- Use caution when cleaning and changing nozzle tips. In the case where the nozzle tip clogs while spraying, follow the Pressure Relief Procedure for turning off the unit and relieving the pressure before removing the nozzle tip to clean.
- Do not leave the unit energized or under pressure while unattended. When the unit is not in use, turn off the unit and follow the Pressure Relief Procedure for turning off the unit
- Check hoses and parts for signs of damage. Replace any damaged hoses or parts.
- This system is capable of producing 3630 psi. Use DP replacement parts or accessories that are rated a minimum of 3000 psi



AIRLESS PAINT SPRAYER



WARNING

	<p>PRESSURIZED ALUMINUM PARTS HAZARD</p> <p>Use of fluids that are incompatible with aluminum in pressurized equipment can cause serious chemical reaction and equipment rupture. Failure to follow this warning can result in death, serious injury, or property damage.</p> <ul style="list-style-type: none">• Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents.• Many other fluids may contain chemicals that can react with aluminum. Contact your material supplier for compatibility.
	<p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none">• Always wear appropriate gloves, eye protection, and a respirator or mask when painting.• Do not operate or spray near children. Keep children away from equipment at all times.• Do not overreach or stand on an unstable support. Keep effective footing and balance at all times.• Stay alert and watch what you are doing.• Do not leave the unit energized or under pressure while unattended. When the unit is not in use, turn off the unit and follow the Pressure Relief Procedure for turning off the unit.• Do not operate the unit when fatigued or under the influence of drugs or alcohol.• Do not kink or over-bend the hose.• Do not expose the hose to temperatures or to pressures in excess of those specified by us.• Do not use the hose as a strength member to pull or lift the equipment.
	<p>MOVING PARTS HAZARD</p> <p>Moving parts can pinch, cut or amputate fingers and other body parts.</p> <ul style="list-style-type: none">• Keep clear of moving parts.• Do not operate equipment with protective guards or covers removed.• Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure and disconnect all power sources.
	<p>BURN HAZARD</p> <p>Equipment surfaces can become very hot during operation. To avoid severe burns, do not touch hot equipment. Wait until equipment has cooled completely.</p>
	<p>TOXIC FLUID OR FUMES HAZARD</p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none">• Please pay attention to know the specific hazards of the fluids before spraying.• Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.
	<p>PERSONAL PROTECTIVE EQUIPMENT</p> <p>You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. This equipment includes but is not limited to:</p> <ul style="list-style-type: none">• Protective eyewear, and hearing protection.• Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.


**Maintenance Tips:**

1. There are two sides for the ball seat, both are chamfered, for one side worn, change to another side.
- 2. While changing the V-packings (both the upper and lower ones) for piston rod, please note that the convexity side shall be towards the piston rod, then using rubber hammer to hit the flat side of the V-packings to fit the piston rod.
- 3. While fastening the screws for the pump block, please do not fasten one screw to maximum and then fasten the other one, the correct action is to fasten one screw to 90% depth first and then fasten the other screw to maximum and later fasten the first screw to maximum.
- 4. There is one washing piece inside the pressure sensor, normally the washer won't be broken, but it can not be left out.
- 5. After changing the upper V-packings, the nut shall be fully tightened by using a bench clamp.
- 6. Before starting up a new airless piston pump, please double check the two screws for the pump block and make sure that they are fully fastened. Same checking after changing new V-packings. As the V-packings are made of high polymer material, after being stocked or used for some time, they could somehow expand.
- 7. It's critically important to turn on the PRIME VALVE before spraying or after changing the paint bucket, if air happens to enter into the piston pump system and you forget turn on the PRIME VALVE before spraying, it will do big damage to the machine system itself, as the compression ratio for paint coatings and for air are different.
- 8. The positive pole and negative pole for the motor can not be connected reversely via the carbon brush, if connected reversely, then the motor will turn reversely, if the machine runs this way for some time, the motor will become demagnetized. (*For model X20 only)
- 9. If the V-packings are broken, then there will be paint coatings leakage, please change V-packings immediately, otherwise, the paint coatings may enter into the gear box to damage the whole gear box.
- 10. While turning the pressure knob to adjust pressure, please do not turn the knob too hard, as the electric parts inside the knob could be damaged due to too hard turning.
- 11. There is micro switch in every airless pump with mechanical pressure control system, and the fixing screw of the micro switch is set properly before shipment, please do not try to change the position of the fixing screw, otherwise, the micro switch may not work properly. (For X20 model only)
- 12. One quick tip to identify if the ball seat is good or not, after turning the PRIME VALVE back to spraying position, please open the front cover, if the connection rod stays on the upper position, then the ball inside the piston rod is somehow damaged, if the connection rod stays on the lower position, then the ball seat is somehow damaged.
- 13. If the airless piston pump is not fully cleaned after spraying, the drywall coatings may stop the pressure sensor from working properly, so the airless piston pump shall be fully cleaned after spraying.
- 14. If the fuse is burned due to over voltage, please check the capacitor first to see if it's in good condition, if yes, then please further check the bridge rectifier with a universal meter.
- 15. One quick tip to check the pressure control board for airless piston pumps with mechanical pressure control system, first step is to turn on the PRIME VALVE, then stick to the micro switch with a screw driver, if the machine could stop, means no problem for the pressure control board.
- 16. If the airless pump is equipped with manifold filter, then the filter shall be often cleaned after spraying, once per day is recommended, or at least once per week, if the filter is totally stuck by drywall coatings, then the electric board and pressure sensor could be burned, under this situation, fuse could not protect the electronical board and pressure sensor.
- 17. As a reminder, for big airless piston pump with big flow rate (mainly refers to X45 and X52/X52L), please do not use short high pressure hose like 3m or 5m, as it might cause serious motor damage. Cleaning the machine, parts every time after finished the paint work.
- 18. Tips need to replace after 4000 – 5000 m² depending on abrasiveness of paint.
- 19. The Piston rod/V-packing and sintered carbide ball need to replace after about 200 hours spraying, Especially when the pressure goes down, or difficult to draw in paint.
- 20. For the permanent magnet DC motor, the carbon brush need to replace after 1500 hours, otherwise, the motor will be damaged.
- 21. Please check every parts had been screwed on the machine very tightly before using machine.
- 22. If the machine need to be storage over 10 days, Do run the machine with lubricating oil thoroughly, for rust protection or any stuck inside the pump. (check the details in CLEAN UP)
- 23. For the maintenance of the fluid pump, do strictly in accordance with the instructions, and screw tightly. (check the details in Service)
- 24. Please read the manual or contact the distributor if any problems with the machine, DO NOT take the machine to pieces without professional staff.



AIRLESS PAINT SPRAYER

Component Identification FOR X51L

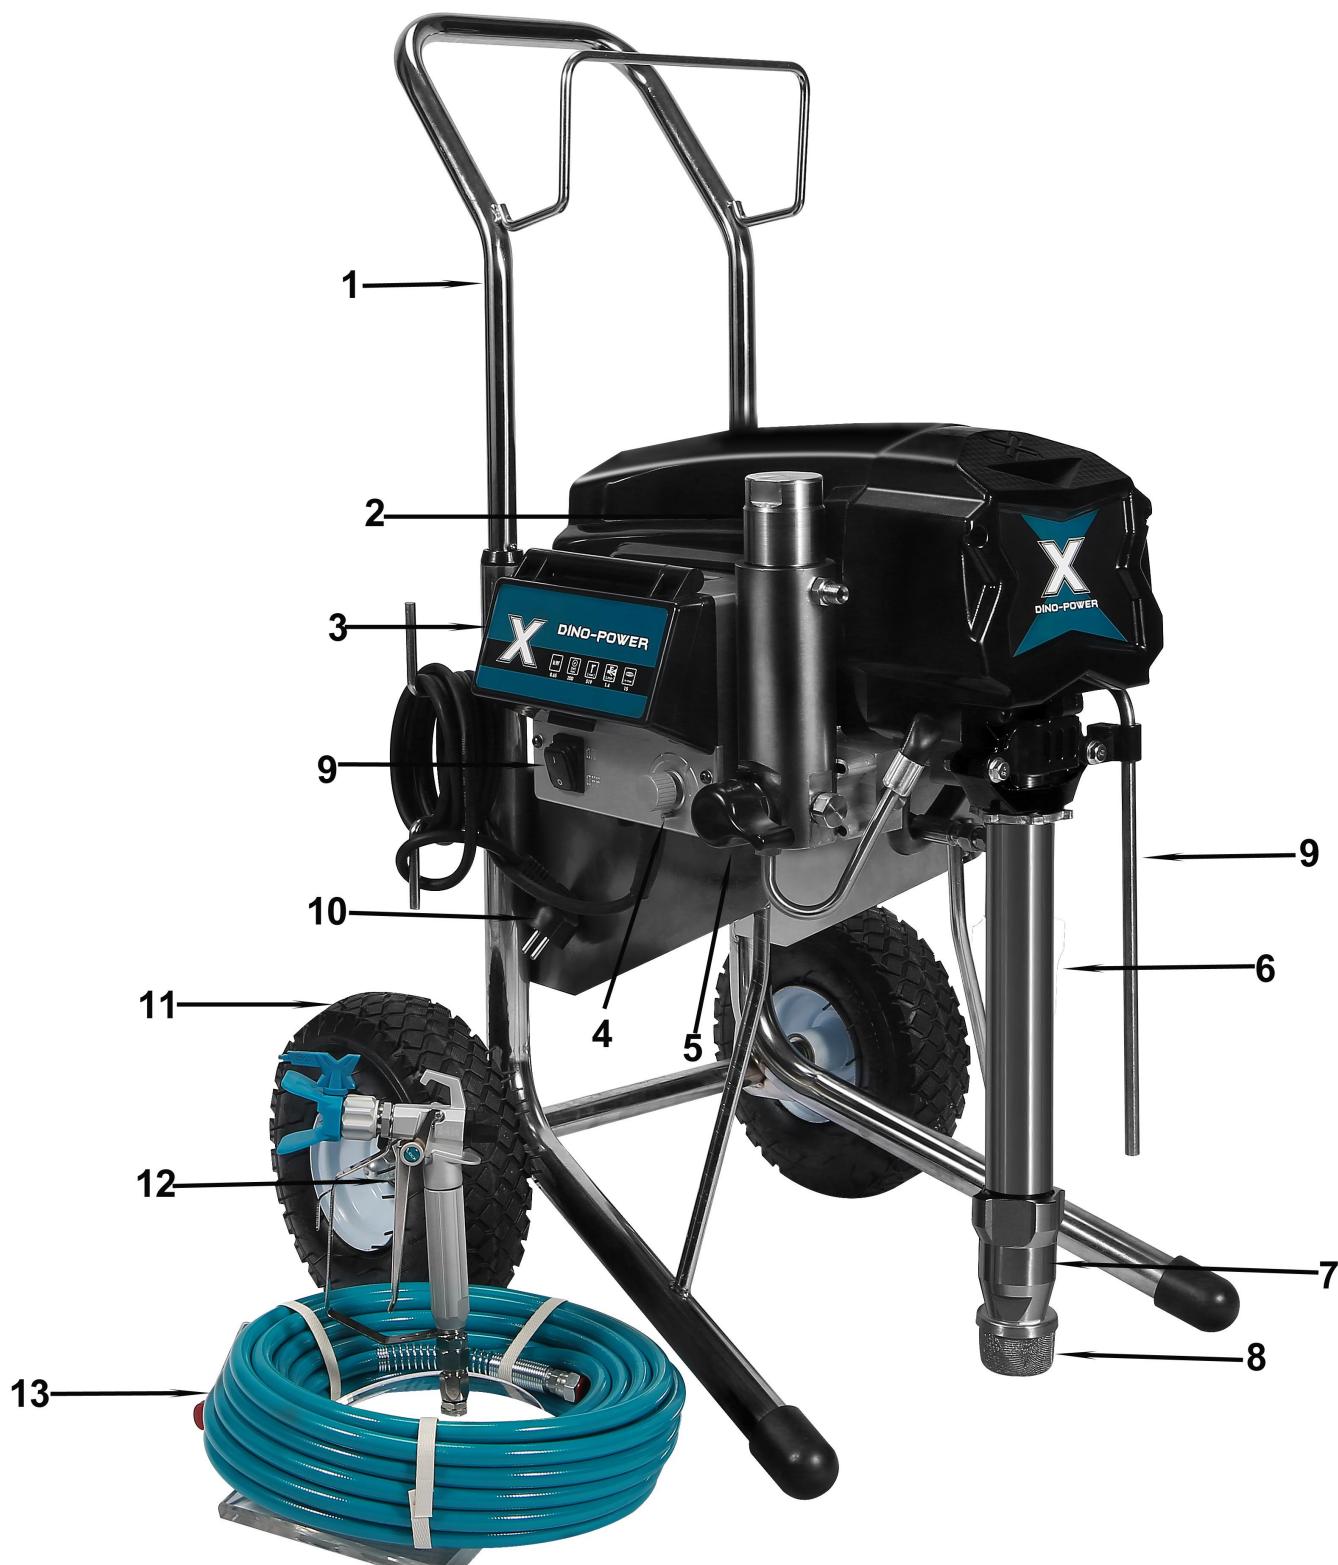



AIRLESS PAINT SPRAYER

1	Cart/ Hose with wrap rack	Carry machine and Stows paint hose. (DP637H)
2	Filter Housing (Manifold filter inside**)	Manifold filter will reduce the tip clogs and ensure you nice finish.
3	Digital pressure display (Under the cover)	X20 With Pressure Gauge Only X24 X28 X32 X42 X45 X51 X80L With digital pressure display
4	Pressure regulator	Adjust the pressure for different applications.
5	Prime/Spray valve.	<ul style="list-style-type: none">•In PRIME position (pointing down) directs fluid to prime tube.•In SPRAY position (pointing parallel) directs pressurized fluid to paint hose.•Automatically relieves pressure system in overpressure situations
6	Fluid pump (piston rod&v-packing** inside)	Drains fluid in system during priming and pressure relief.
7	Suction tube	Draws fluid from paint pail into pump. (the tube must be screwed tightly otherwise air enter inside, so the pressure can't be reached your desired high pressure.)
7	Suction hose*	The pics is X51L lower suction type, For X45, it will be the suction tube, and X20/24/28 will be the suction hose instead.
8	Suction filter	Suction filter reduce the tip clogs and ensure you nice finish.
9	Prime hose	
10	Power Plugs	It will be suitable for countries.
11	Wheel	Easy for machine to stand/move on the ground.
12	Airless spray gun	Dispenses fluid.
13	High pressure hose	Transports high-pressure fluid from pump to spray gun.

(The parts marked with ** are easily worn parts.)



AIRLESS PAINT SPRAYER

Technical Data

Item No.	X20	X20i
Pressure controlling	Mechanical	Electronic
Motor power	1100W PMDC	1100W PMDC
Flow rate	2.0L/MIN	2.0L/MIN
Max. tip size	0.021"	0.021"
Max.Working pressure	200bar/2900psi	200bar/2900psi
PICS		
Contents in package	X-450 Gun, X 517 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .	X-450 Gun, X 517 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .
X24	X28	X32
Electronic	Electronic	Electronic
1500W Brushless Motor	1700W Brushless Motor	1800W Brushless Motor
2.4L/MIN	2.8L/MIN	3.2L/MIN
0.023"	0.025"	0.031"
210bar/3045psi	210bar/3045psi	210bar/3045psi
		
X-450 Gun, X 517 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .	X-450 Gun, X 517 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .	X-450 Gun, X 521 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .



AIRLESS PAINT SPRAYER


X42	X41L	X45
Electronic	Electronic	Electronic
2500W Brushless Motor	2600W Brushless Motor	2000W Brushless Motor
4.0L/MIN	4.0L/min	4.2L/MIN
0.035"	0.033"	0.033"
210bar/3045psi	210bar/3045psi	210bar/3045psi
X-450 Gun, X 527 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .	X-450 Gun, X 525 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .	X-450 Gun, X 525 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .
X51L	X80	X81L
Electronic	Electronic	Electronic
3000W Brushless Motor	3000W Brushless Motor	3000W Brushless Motor
5.1L/MIN	8.0L/MIN	8.0L/MIN
0.037"	0.048"	0.045"
210bar/3045psi	210bar/3045psi	210bar/3045psi
DP-6376G High pressure spray gun, X 525+531 Spray Tip, X Guard, 1/4 in x 15M Airless Hose, 45cm extension pole, lubricating oil .	X-450 Gun, X 525&543 Spray Tip, X Guard, 3/8 in x 15M Airless Hose, 1/4"x1M whip hose, 3/8"x1/4" connector, 45cm extension pole, lubricating oil .	DP-6376G Gun, X 539 Spray Tip, X Guard, 3/8 in x 15M Airless Hose, 45cm extension pole, lubricating oil .



Operation

Trigger Lock

Always engage the trigger lock when you stop spraying to prevent the gun from being triggered accidentally by hand or if dropped or bumped.

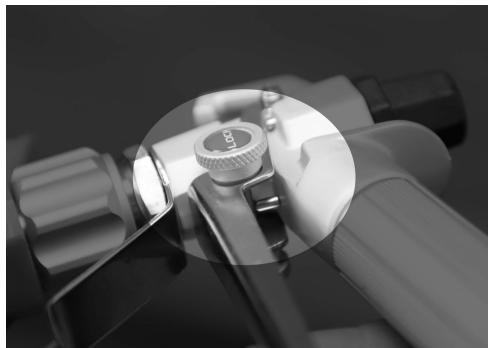


Pressure Relief Procedure

Follow this **Pressure Relief Procedure** whenever you stop spraying and before cleaning, checking, servicing, or transporting equipment.

1. Turn power switch OFF and unplug power cord.




2. Turn Prime/Spray valve to PRIME to relieve pressure.

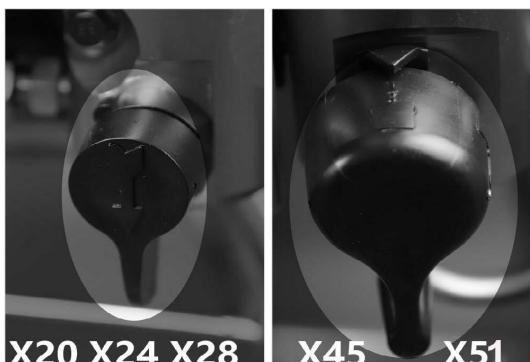

3. Hold gun firmly to side of pail. Trigger the gun to relieve pressure.



4. Engage trigger lock.

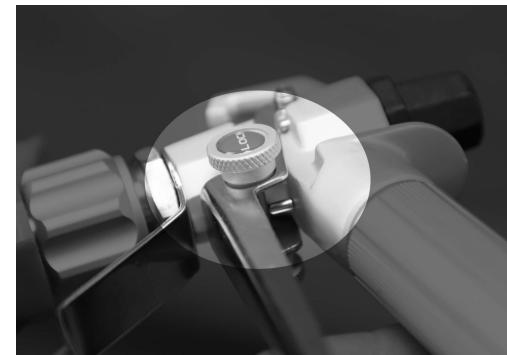

NOTE: Leave Prime/Spray valve in the PRIME position until you are ready to spray again.

If you suspect the spray tip or hose is clogged or that pressure has not been fully relieved after following the steps above, VERY SLOWLY loosen tip guard retaining nut or hose end coupling to relieve pressure gradually, then loosen completely. Clear hose or tip obstruction. Read Unclogging Spray Tip instructions in the Sprayer or Gun Operation manual.



Setup

1. Prepare the paint according to the manufacturer's recommendations


This is probably one of the most important steps toward trouble-free spraying!

Remove any skin that may have formed on the top of the paint. If necessary, thin the paint. Finally, strain the paint through a fine nylon mesh filter bag (available at most paint dealers) to remove particles that could clog the spray tip


3. Unscrew tip and guard assembly from gun.



4. Uncoil hose and connect one end to gun. Use two wrenches to tighten securely and tightly.

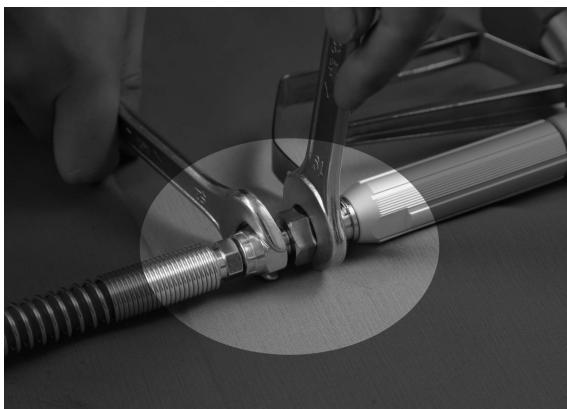


5. Connect other end of hose sprayer.

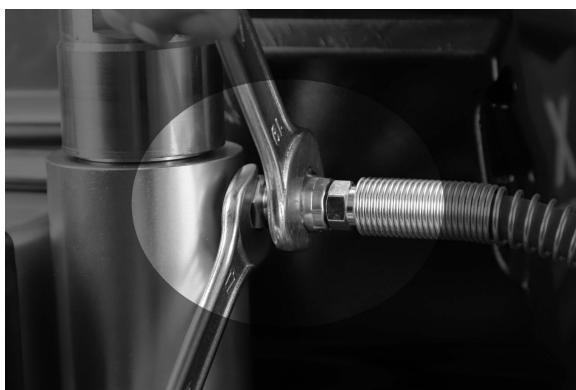

6. Oiling

Fill throat packing nut with lubricating oil(3~5 drops) to prevent premature packing wear, Do this every time when you spray.

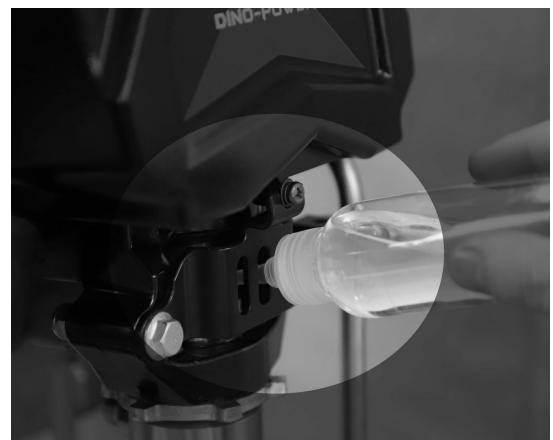

7. Check the electrical service

Be sure the electrical outlet is properly grounded. Longer extension cords may affect the sprayer performance. Use more spray hose, not longer extension cords.

8. Plug in the sprayer.

First be sure the ON/OFF switch is OFF and the pressure control is turned fully counterclockwise. Plug the sprayer into a grounded outlet that is at least 3 m away from the spray area to reduce the chance of a spark igniting, spray vapors or dust particles.



X20



X24 X28 X45 X51

Pressure regulator valve

Clockwise: stronger / Higher pressure



Counter clockwise: weaker / Lower pressure






AIRLESS PAINT SPRAYER

Startup

1. First be sure the ON/OFF switch is OFF.
2. Adjust Pressure Control counter clockwise to lowest pressure.
3. Place the suction hose into the coating barrel.



4. Pull up the Prime/Spray Valve to Prime position.

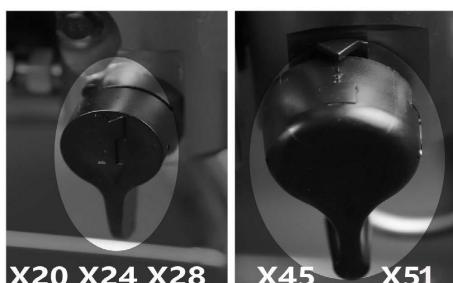


5. Plug sprayer in a grounded cable socket.
6. Switch ON the machine.



7. Turn the Pressure Control clockwise, till the fluid is circulating in the prime tube

8. Turn power switch OFF.

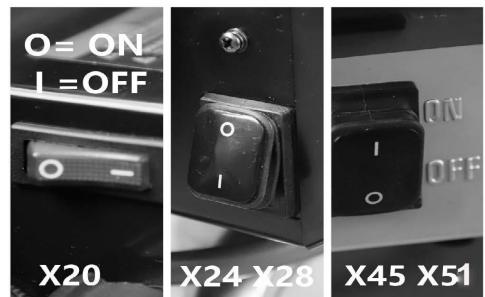


9. Transfer suction tube to paint pail and submerge suction tube in paint.



10. Turn power switch ON.

11. When you see paint coming out of prime tube:

- (1). Point gun into waste pail.
- (2). Unlock gun trigger lock.
- (3). Pull and hold gun trigger.
- (4). Turn Prime/Spray valve to SPRAY position.

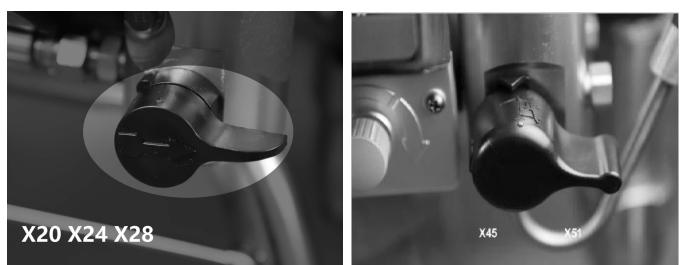

12. Continue to trigger gun into waste pail until you see only paint coming out of gun.

13. Release trigger. Engage trigger lock.


14. Transfer prime tube to paint pail and clip prime tube to suction tube.




SPRAYING SPRAYING TECHNIQUE

1. The key to a good paint job is an even coating over the entire surface. With spray painting, this is done by using even strokes, with your arm moving at a constant speed and keeping the spray gun a constant distance from the surface.

2. As much as possible, keep the spray gun at right angles to the surface. This means moving your entire arm back and forth rather than just flexing your wrist.

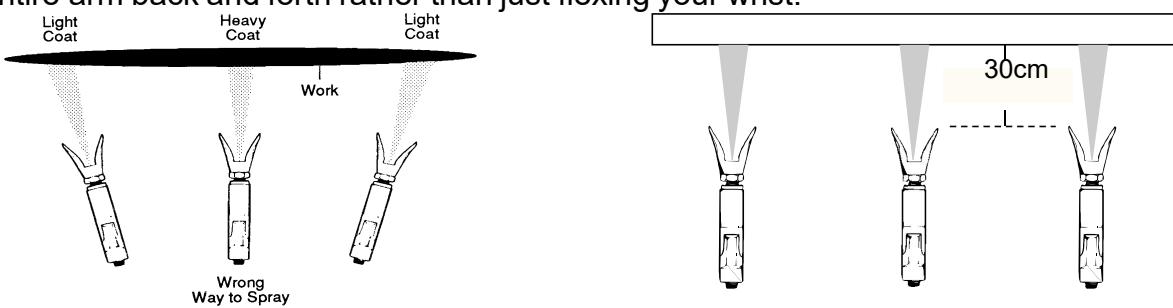


3. Keep the spray gun perpendicular to the surface, otherwise one end of the pattern will be thicker than the other.

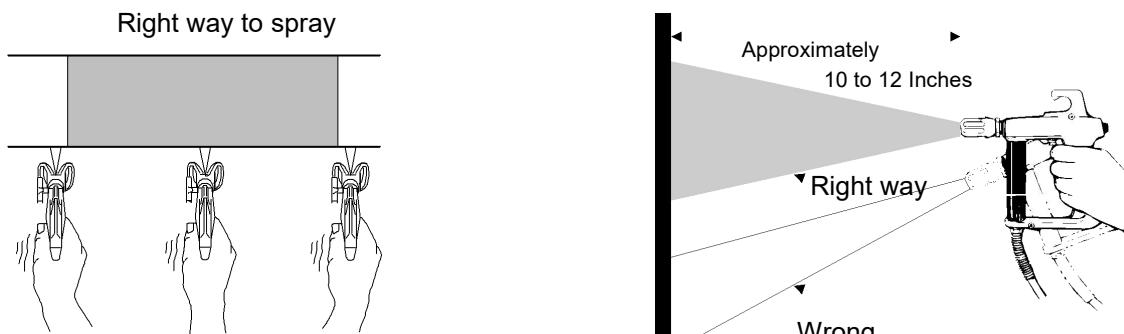


4. In most cases, the best spraying distance is 10 to 12 inches (25-30cm) between the spray tip and the surface.

5. The spray gun should be triggered off at the end of each stroke and on again at the beginning of the next. This avoids paint buildup at the end of the stroke which may result in runs and sags. Triggering at the end of the stroke also saves paint and results in a better looking job. (See picture below)

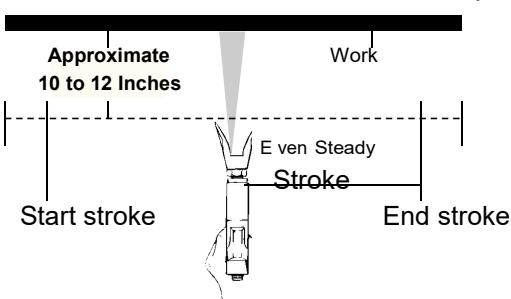

6. The correct speed for moving the gun will allow a full, wet coating to be applied without runs or sags. Lapping each stroke about 40% over the previous stroke produces uniform paint thickness. Spraying in a uniform pattern alternately from right to left and then left to right, provides a professional finish. (See picture on the right)

One way to do this is to point the spray tip at the edge of the last stroke

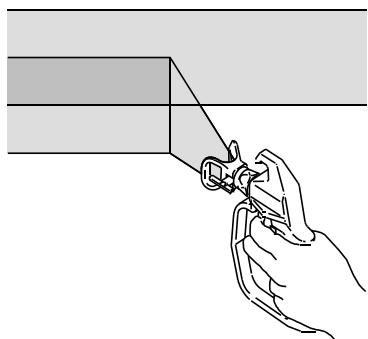




AIRLESS PAINT SPRAYER

before triggering the gun on.


7. When taking a short break from painting (up to 1 hr.), lock the spray gun trigger **OFF**, reduce pressure to its minimum (zero) setting and set the unit to Prime position . Turn sprayer off and unplug. Refer to Pressure Relief Procedure.

8. For interior corners, such as on a bookcase or inside a cabinet, aim the gun toward the center of the corner to spray. By dividing the spray pattern this way, the edges on both sides are sprayed evenly.

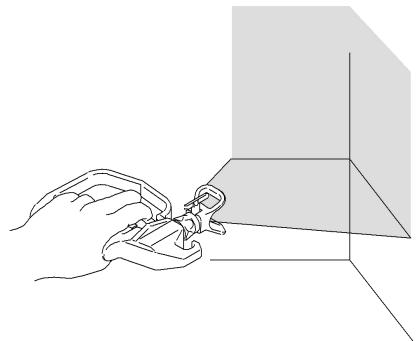


Install Tip & Guard on Spray Gun


1. Engage trigger lock.

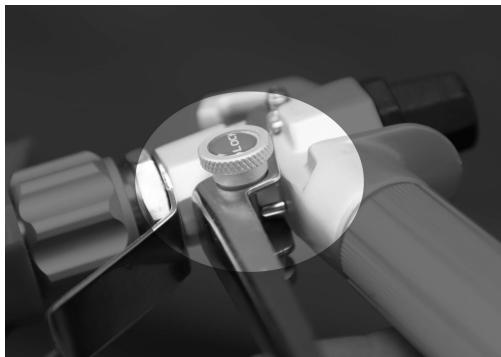


2. Verify tip and guard parts are assembled in order shown.

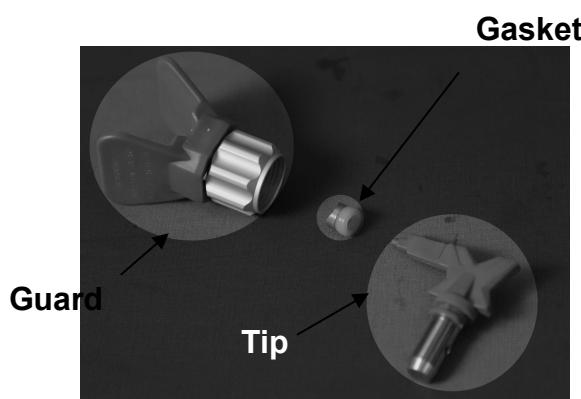

3. Use tip to align seat

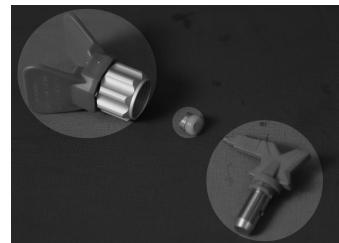

Tip must be pushed in
guard all the way into guard

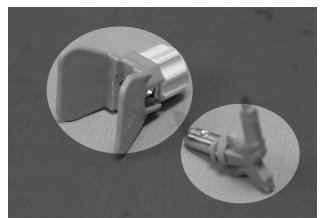

4. Screw tip and guard assembly on
gun. Tighten retaining nut.





Tip Selection

Selecting Tip Hole Size

Tips come in a variety of hole sizes for spraying a range of fluids. Your sprayer includes an 0.017 in (0.43 mm) tip or maybe 0.019" (0.48mm) for use in most spraying applications. For narrow or smaller surfaces(cabinet,fence,railings), pattern width of 6 inches is the best choice, it will provide sharper definition and more control; For large surfaces(Ceilings/walls), a wider spray pattern width of 10 to 12 inches is your best choice to cover large areas more quickly.

Using a good-quality spray tip that is appropriately sized for your painting project is critical to achieving good spraying results, the spray tip controls the amount of paint applied and the area the spray pattern will cover. A range of tip sizes classified by both hole size and spray pattern width can be used, based on 3 factors;

1;Coating/painting 2;Surface being sprayed 3;Sprayer's ability to support the tip hole size.

A key difference is sprayers is the maximum tip they can support. Choose your sprayer based on the coating types you'll be spraying, and make sure the largest tip(hole size) you plan to use is within the maximum tip size range the sprayer can support.

It is always best to have a machine with more capacity, Fox example, if you plan to use .017 tip frequently, your sprayer's capacity should be one tip hole size larger(.019 tip), this allows for tip wear, which causes the tip hose size to increase.

Choosing the Correct Tip

Consider coating and surface to be sprayed. Make sure you use best tip hole size for that coating and best fan width for that surface.

Tip Hole Size

Tip hole size controls flow rate - the amount of paint that comes out of the gun.

HINTS:

- Use larger tip hole sizes with thicker coatings and smaller tip hole sizes with thinner coatings.


Fan Width Fan width is the size of the spray pattern, which determines the area covered with each stroke. Narrower fans deliver a thicker coat, and wider fans deliver a thinner coat.

Tip Hole Size	Coatings				
	Stains	Enamels	Primers	Interior Paints	Exterior Paints
0.011 in. (0.28 mm)	✓				
0.013 in. (0.33 mm)	✓	✓			
0.015 in. (0.38 mm)		✓	✓	✓	
0.017 in. (0.43 mm)			✓	✓	✓
0.019 in. (0.48 mm)					✓



Understanding Tip Number

The last three digits of tip number contain information about hole size and fan width on surface when gun is held 12 in. (30.5 cm) from surface being sprayed.

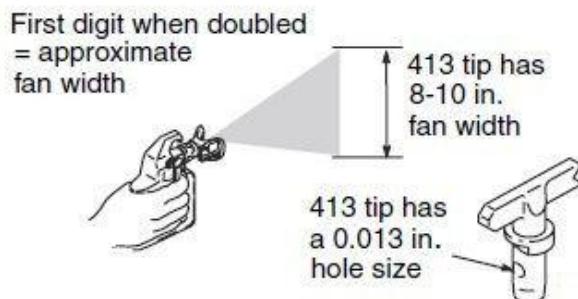

Last two digits = tip hole size in thousands of an inch


Tip Part No.	Fan Width 12 in. (305 mm) from surface	Hole Size
311	6 - 8 in. (152 - 203 mm)	0.011 in. (0.28 mm)
411	8 - 10 in. (203 - 254 mm)	0.011 in. (0.28 mm)
313	6 - 8 in. (152 - 203 mm)	0.013 in. (0.33 mm)
413	8 - 10 in. (203 - 254 mm)	0.013 in. (0.33 mm)
415	8 - 10 in. (203 - 254 mm)	0.015 in. (0.38 mm)
515	10 - 12 in. (254 - 305 mm)	0.015 in. (0.38 mm)
417	8 - 10 in. (203 - 254 mm)	0.017 in. (0.43 mm)
517	10 - 12 in. (254 - 305 mm)	0.017 in. (0.43 mm)

Reversible Tip Selection Chart

Orifice Size inch	Fan Width - Inches					Flow Rate		Application	Filter
	4" - 6" Fan	6" - 8" Fan	8" - 10" Fan	10" - 12" Fan	12" - 14" Fan	gpm	L/min		
0.011"	211	311	411	511	611	0.12	0.45	Stain or Lacquer	150mesh (red)
0.013"	213	313	413	513	613	0.18	0.68		
0.015"	215	315	415	515	615	0.24	0.91	Oil Base Paint	100mesh (yellow)
0.017"	217	317	417	517	617	0.31	1.17	Latex Paint /	100mesh
0.019"	219	319	419	519	619	0.38	1.44	Acrylic / Enamel	60mesh (white)
0.021"		321	421	521	621	0.47	1.78		
0.023"		323	423	523	623	0.57	2.16	Heavy latex	60mesh (white)
0.025"		325	425	525	625	0.67	2.54		
0.027"			427	527	627	0.77	2.91		
0.029"		329	429	529	629	0.90	3.41	Elastomeric / Blockfiller / Primer /	30mesh (green)
0.031"		331	431	531	631	1.03	3.90		
0.033"		333	433	533	633	1.17	4.43		
0.035"		335		535		1.31	4.98		
0.043"	243	343	443	543	643	1.98	7.51		

Important things to know about tip wear

It's important to replace a tip when it becomes worn, this ensures you'll have a precise spray pattern, maximum productivity and a quality finish. When tip wears, the hole (orifice) size increases and spray pattern width decreases.

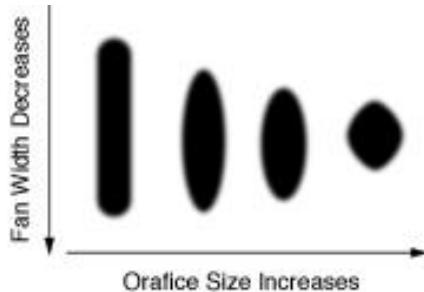

Tip life varies by coating, Extend tip life by spraying at the lowest pressure that breaks up (atomizes)the coating into a complete spray pattern.

Recommend tip replacement Latex: After 4000~5000 m²



AIRLESS PAINT SPRAYER


CLEAN UP

As with all spray equipment, your sprayer must be cleaned properly or it will not operate properly. Clogged are the most common causes of problems. If followed, these guidelines will insure trouble free performance from your sprayer.

1. Do pressure relief procedure.

Remove siphon tube set from paint and place in flushing fluid.

Note: Use water for water base paint and mineral spirits for oil base paint

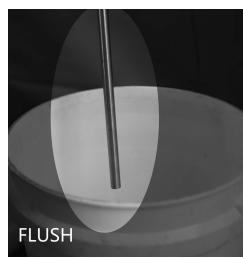

2. Turn power On, turn prime/spray valve up to close drain valve.



3. Increase the pressure to about 1/2 maximum take the trigger safety OFF, trigger gun until flushing fluid appears.




3. Move the gun to waste pail, hold gun against pail, trigger gun to thoroughly flush system, release trigger and put trigger safety ON.



4. Turn prime valve down to open drain valve and allow flushing fluid to circulate for 15 seconds to clean drain tube.




5. Raise siphon tube above flushing fluid and run sprayer for 15 or 30 seconds to drain fluid.

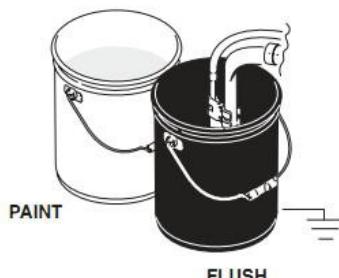




AIRLESS PAINT SPRAYER

7. Turn up prime valve up to close drain valve, Trigger gun into flushing pail to purge fluid from hose, Turn Power **OFF**.

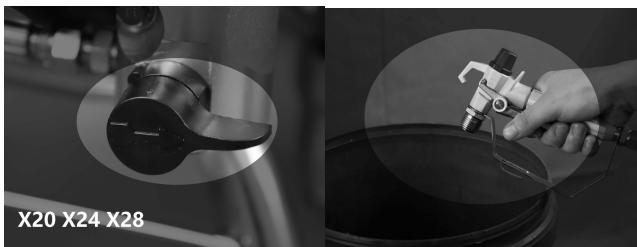

8. Turn prime valve down to open drain valve, Unplug sprayer.

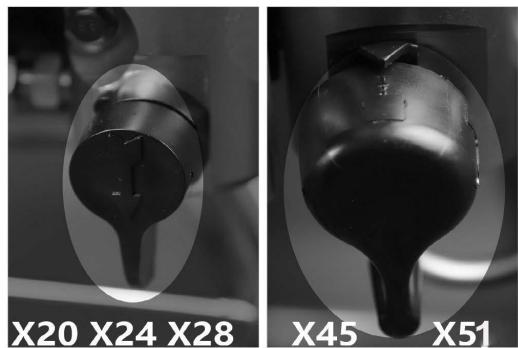

9. Remove filters from gun and sprayer, if installed. Clean and inspect, install filters.



10. If flushing with water, flush again with mineral spirits, or pump armor, to leave a protective coating to prevent freezing or corrosion.

11. If the machine will be storage for over 10 days, after you cleaned the machine thoroughly, please take off the suction tube, hose&gun, and pour about 10ml WHITE lubricating oil into the fluid pump, Then switch on the machine and let it keep running (PRIME POSITION) for 5 seconds(once you can see the oil in the prime tube), This will prevent the wet parts inside being stuck, corrosive or rusted.



12. Wipe sprayer, hose and gun with a rag soaked in water or mineral spirits.





Troubleshooting

Problem	Cause	Solution
Power switch is on and sprayer is plugged in, but motor does not run, and pump does not cycle.	Pressure is set at zero pressure.	Turn pressure control knob clockwise to increase pressure setting.
	Motor or control is damaged.	Please contact with your supplier or DP-AIRLESS directly.
	Electric outlet is not providing power.	<ul style="list-style-type: none">Try a different outlet or plug in something that you know is working to test outlet.Reset building circuit breaker or replace fuse.
	Extension cord is damaged.	Replace extension cord.
	Sprayer electric cord is damaged.	Check for broken insulation or wires. Replace electric cord if damaged.
	Paint and/or water is frozen or hardened in pump.	<p>Unplug sprayer from outlet. If frozen do NOT try to start sprayer until it is completely thawed or you may damage the motor, control board and/or drivetrain.</p> <p>Make sure power switch is OFF. Place sprayer in a warm area for several hours. Then plug in power cord and turn sprayer ON. Slowly increase pressure setting to see if motor will start.</p> <p>If paint is hardened in sprayer, pump packings, valves, drivetrain or pressure switch may need to be replaced. Please contact with your supplier or contact with DP-AIRLESS directly.</p>



AIRLESS PAINT SPRAYER

Problem	Cause	Solution
Sprayer starts up but does not draw in paint.	Unit will not prime or has lost prime	Replace prime Unit
	No paint. Suction tube not totally immersed in paint	Immerse suction tube in paint
	Suction set filter clogged.	Clean filter.
	Suction tube loose at inlet valve	Clean connection and tighten
	Inlet valve is leaking	Clean inlet valve. Be sure the ball seat is not nicked or worn and that ball seats well, Reassemble valve.
	Pump packing are worn	Replace pump packings.
	Piston rod worn or damaged.	Clean or replace
Pump cycles but does not build up pressure.	Pump is not primed.	Prime pump.
	Inlet screen is clogged .	Clean debris off inlet screen and make sure suction tube is immersed in fluid.
	Suction tube is not immersed in paint.	Make sure suction tube is immersed in paint.
	Suction tube is leaking.	Tighten suction tube connection. Inspect for cracks or vacuum leaks. If cracked or damaged, replace suction tube.
	Prime/Spray Valve is worn or obstructed with debris.	Clean the valve or replace a new one.
Pump cycles, but paint only dribbles or spouts when spray gun is triggered.	Pressure is set too low.	Slowly turn Pressure Control Knob clockwise to increase pressure setting which will turn motor on to build pressure.
	O-ring in pump is worn or damaged	Replace O-rings
	Inlet valve ball is packed with material	Clean inlet valve,
	Spray tip is clogged	Unclog spray tip
	Fluid filter is clogged.	Clean or replace fluid filter
	Spray gun fluid filter is clogged.	Clean or replace gun fluid filter,
	Spray tip is too large or worn.	Replace tip.



AIRLESS PAINT SPRAYER

Problem	Cause	Solution
Sprayer draws up paint but drops away when gun is opened	Worn spray tip	Replace with new tip.
	Suction set filter clogged	Clean filter.
	Gun or spray tip filter plugged.	Clean or replace filter. Keep extra filters on hand
	Paint too heavy or coarse.	Thin or strain paint
	Worn V-packing assembly.	Replace
	Inlet valve worn or damaged.	Replace valve
Tip assembly leaks	Assembled incorrectly	Check assembly.
	Worn seal.	Replace seal.
Spray gun won't spray	Spray tip, gun filter or tip clogged	Clean spray tip
	filter plugged	Clean or replace gun or filter.
	Spray tip in Clean position	Put tip in Spray position
Paint tailing.	Pressure is set too low.	Increase pressure
	Gun, tip, or suction filter plugged.	Clean filters
	Suction tube loose	Tighten suction tube fitting
	Tip worn.	Replace tip
	Paint too thick	Thin paint
Thermal overload tripped	Motor over heated.	Allow to cool 15 to 30 min.
	Paint build up on motor.	Clean paint from motor.
	Unit sitting in hot sun.	Move to a shady location
No display, sprayer operates.	Display is damaged or had bad connection.	Check connection, replace display
Display error code E4	Description: Over-current protection for the electronical control board	1.Check if the voltage reaches 220V, check if the cable length is too small, check if the patch board is properly connected.
	Possible Reason:	2.Change bigger tip size.
	1.Too low voltage, too long cable length, bad contact of the patch board.	3.Thin the coatings as per instruction.
	2.Using too small tip size.	4.Change the pressure sensor.
	3.Coatings is too thick.	5.Change the electronical control board.
	4.Pressure sensor is damaged, too	



AIRLESS PAINT SPRAYER

	high working pressure will cause automatic projection. 5.Electronical control board is broken.	
Display error code E3	Description: Pressure sensor is damaged. Possible Reason: Inner parts of the pressure sensor is broken.	Change a new pressure sensor. Friendly Reminder: Please thoroughly clean the machine in time each time after spraying, keep the inner fluid pump clean, and please store the machine indoors in winter time.
Display error code E5	Description: Over-heat protection for the electronical control board Possible Reason: Over-heat on the electroncial control board, the most likely reason is using too small tip size.	Turn off the power, wait till the electronical control board cools down, and change bigger tip size.
Display error code E12	Description: no-load protection Possible Reason: coatings in the bucket is empty, the machine will automatically stop running to protect the V-packings from fast wear-out.	Turn off the power and then turn on the power, or turn the pressure regulator to minimum and then reset the pressure.
Display error code E14	Description: Motor block protection Possible Reason: 1.Too low voltage and using too small tip size at the same time. 2.Inner parts of the fluid pump is damaged.	1.Check the voltage and change bigger tip size. 2.Check if the inner parts of fluid pump is damaged, if yes, change the fluid pump.
Display error code E15	Description: Communication error of the electronical control board. Possible Reason: Static electricity interferes the communication inside the electroncial control board.	Turn off the power, after the display screen is completely off, turn on the power, if it still can not solve the problem, then change a new electronical control board.
Display error code (??u)	Alarm for checking the power voltage Possible Reason: When the voltage is too low or the machine is not running smoothly, this error code will occur due to not enough input power supply.	1.Check the power cable, check if the patch board is loosened. 2.Change bigger tip size and retry. 3.Turn off the power and adjust the pressure regulator to minimum, after the display screen is completely off, turn on the power supply.
Paint leaks down outside of pump..	Pump packings are worn	Replace pump packings.




AIRLESS PAINT SPRAYER

Fan pattern varies dramatically while spraying. OR Sprayer does not turn on promptly when resuming spraying.	Pressure control switch is worn and causing excessive pressure variation.	Please contact with your supplier or DP-AIRLESS.
--	---	--



AIRLESS PAINT SPRAYER

Parts List

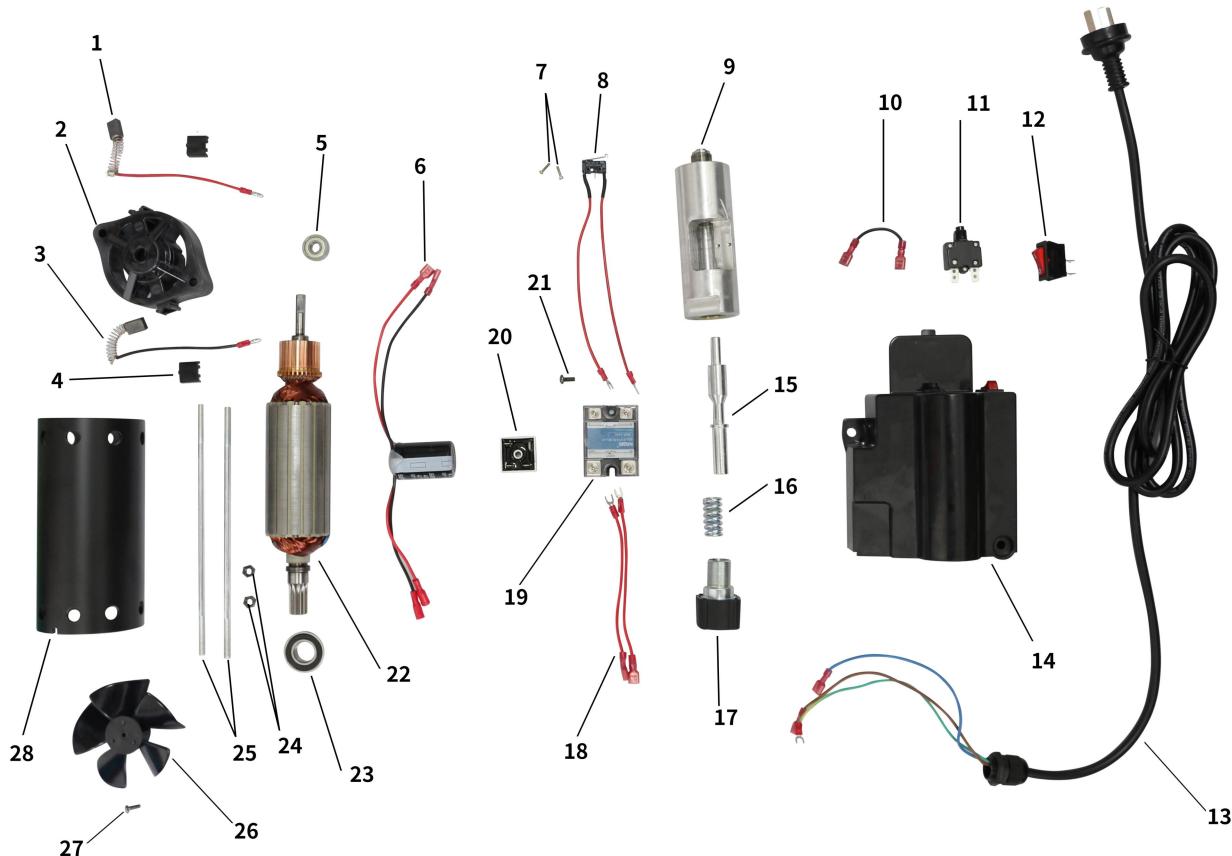

X20 Motor&Pressure control assembly

No.	Serial No.	Description	Qty
1	X20301	Carbon Brush	1
2	X20302	Baffle	1
3	X20303	Carbon Brush	1
4	X20304	Brush Holder	2
5	X20305	Washer	1
6	X20506	Capacitor	1
7	X20507	Screw	2
8	X20508	Wire	1
9	X20509	Pressure Regulator Housing	1
10	X20510	Wire	1
11	X20511	Connector	1
12	X20512	Switch	1
13	X20613	Power Cord	1
14	X20614	Plastic Cover	1


No.	Serial No.	Description	Qty
15	X20515	Stem	1
16	X20516	Spring	1
17	X20517	Pressure Regulating Knob	1
18	X20518	Wire	1
19	X20519	Circuit Board	1
20	X20520	Bridge	1
21	X20521	Screw	1
22	X20322	Rotor	1
23	X20323	Bearing	1
24	X20324	Washer	2
25	X20325	Long Screw	2
26	X20326	Fan	1
27	X20327	Screw	1
28	X20328	Stator	1



AIRLESS PAINT SPRAYER

Parts List

X20 Fluid pump

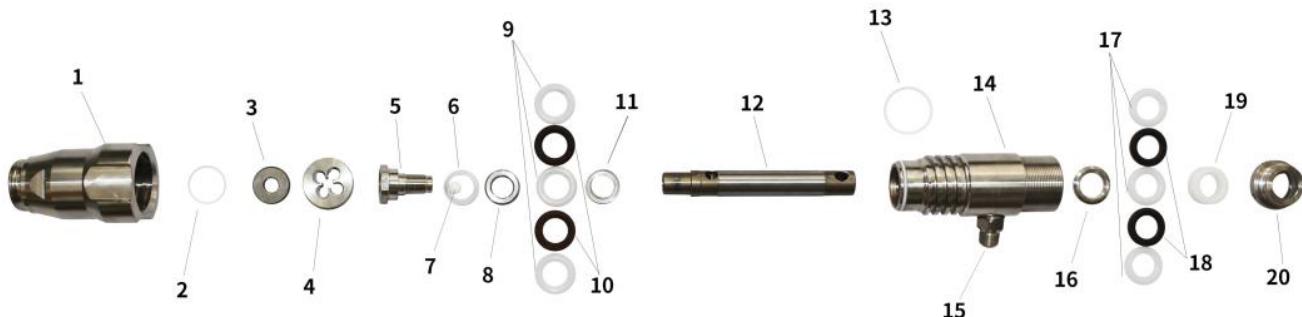


No.	Series No.	Description	Qty	No.	Series No.	Description	Qty
1	x20101	Lower housing	1	11	x20111	Gland, piston	1
2	x20102	O-ring	1	12	x20112	Piston rod	1
3	x20103	Carbide seat	1	13	x20113	O-ring	1
4	x20104	Ball guide	1	14	x20114	Cylinder	1
5	x20105	Piston valve	1	15	x20115	Outlet connector	1
6	x20106	Spacer	1	16	x20116	Gland, piston	1
7	x20107	Ball	1	17	x20117	V-packing, throat	3
8	x20108	Gland, piston	1	18	x20118	V-packing, leather, throat	2
9	x20109	V-packing, piston	3	19	x20119	Gland, throat	1
10	x20110	V-packing, leather, piston	2	20	x20220	Nut, packing	1



AIRLESS PAINT SPRAYER

Parts List

X20 Gear Box

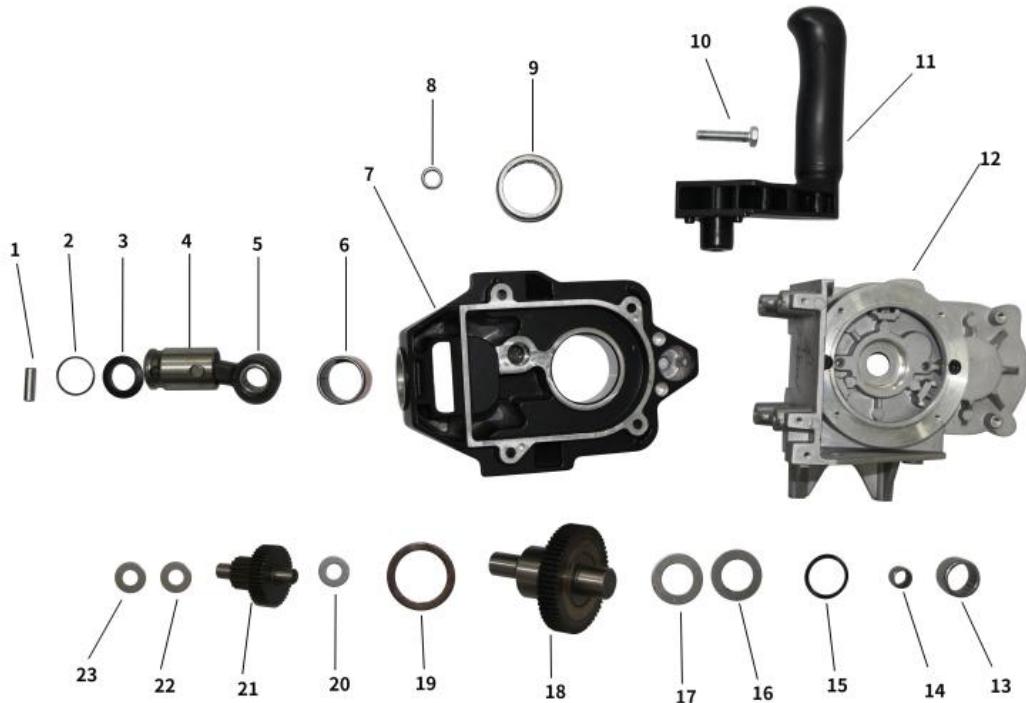


No.	Series No.	Description	Qty		No.	Series No.	Description	Qty
1	x20201	Pin	1		13	X20213	Bearing	1
2	x20202	Washer	1		14	X20214	Bearing	1
3	x20203	Washer, rubber	1		15	X20215	O-ring	1
4	x20204	Connecting rod	1		16	X20216	Washer	1
5	x20205	Needle bearing, connecting rod	1		17	X20217	Washer	1
6	x20206	Bearing	1		18	X20218	Gear, crankshaft	1
7	X20207	Drive housing	1		19	X20219	Washer	1
8	X20208	Bearing	1		20	X20220	Washer	1
9	X20209	Bearing	1		21	X20221	Gear, reducer	1
10	X20210	Screw	1		22	X20222	Washer	1
11	X20211	Handle	1		23	X20223	Washer	1
12	X20212	Cover, drive housing	1					



AIRLESS PAINT SPRAYER

Parts List

X20 Filter Housing

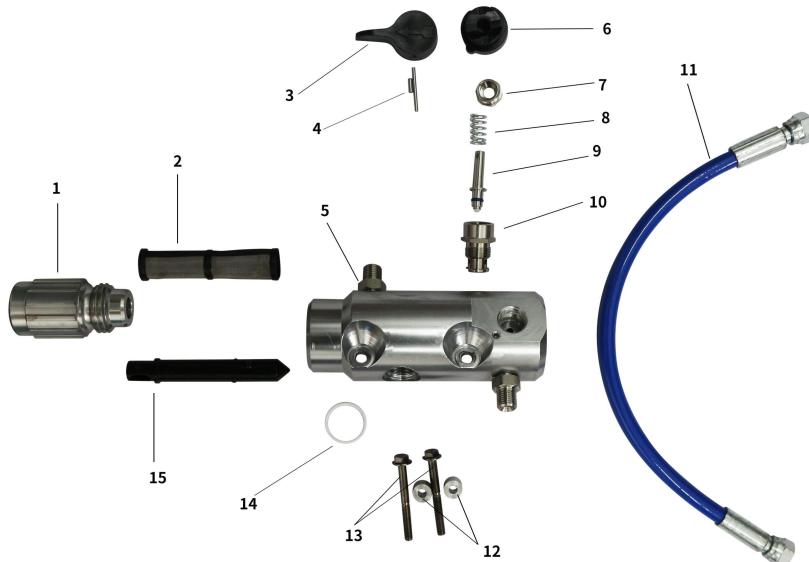

NO.	Series NO.	Description	Qty	NO.	Series NO.	Description	Qty
1	X20401	Manifold cap	1	9	X20409	Prime/spray valve stem	1
2	X20402	Pump filter	1	10	X20410	Prime/spray valve housing	1
3	X20403	Prime/spray valve handle	1	11	X20411	Hose	1
4	X20404	Prime/spray valve groove pin	1	12	X20412	Gasket	2
5	X20405	Manifold	1	13	X20413	Screw	2
6	X20406	Prime/spray valve base	1	14	X20414	O-ring	1
7	X20407	Prime/spray valve Gasket	1	15	X20415	Filter insert	1
8	X20408	Prime/spray valve Spring	1				

X20 Suction hose Assembly




NO.	Series NO.	Description	Qty
1	x20801	Retainer	1
2	x20802	Suction hose	1
3	x20803	Drain hose	1
4	x20804	Pump rod cover	1
5	x20805	Retainer	1
6	x20806	Screw	1
7	x20807	Suction filter	1



AIRLESS PAINT SPRAYER

Parts List

X20 Motor Cover &Cart

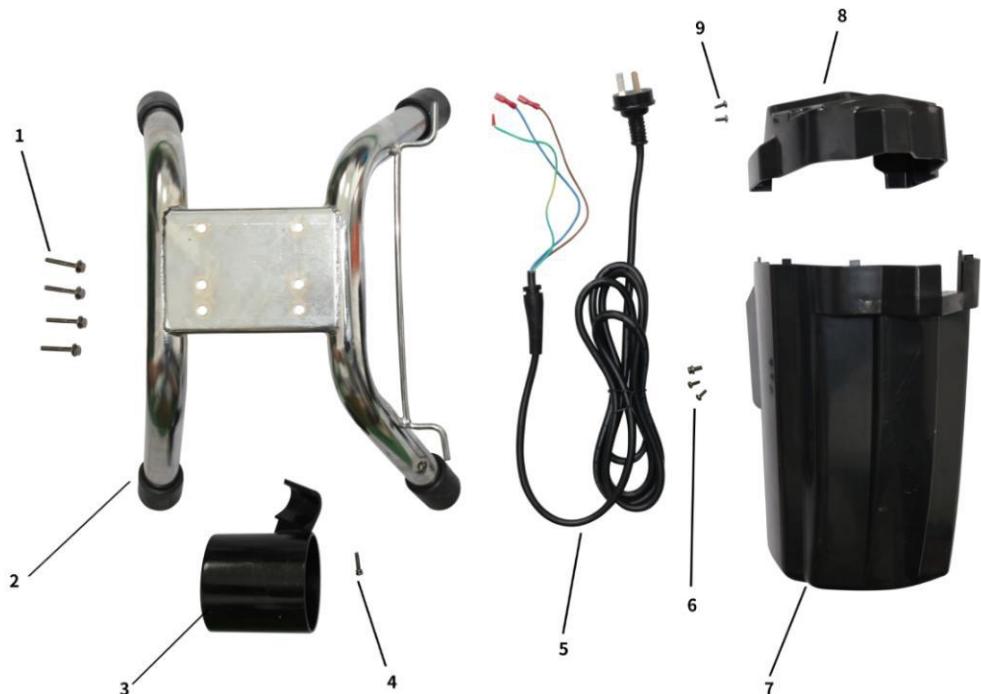

NO.	Series NO.	Description	Qty
1	X20701	Screw	4
2	X20702	Frame	1
3	X20703	Suction/drain cup	1
4	X20704	Screw	1
5	X20605	Power wire	1


NO.	Series NO.	Description	Qty
6	X20606	Screw	3
7	X20607	Motor cover	1
8	X20608	Front cover	1
9	X20609	Screw	2



AIRLESS PAINT SPRAYER


Parts List

X24 Motor Assembly

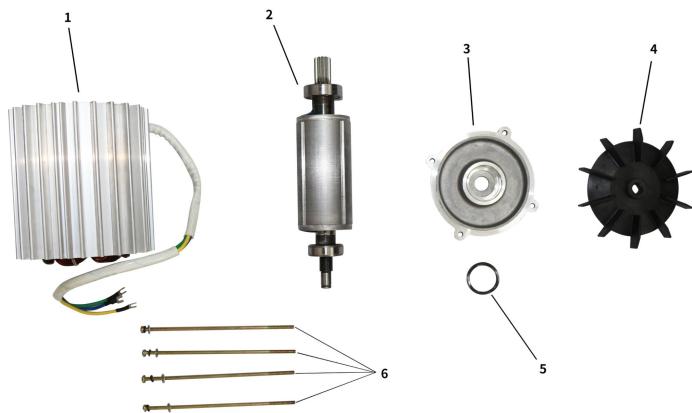

No.	Serial No.	Description	Qty
1	X24301	Stator	1
2	X24302	Rotor	1
3	X24303	Baffle	1
4	X24304	Fan	2
5	X24305	Washer	1
6	X24506	Long Screw	1

X24 Electric Pressure Control Board

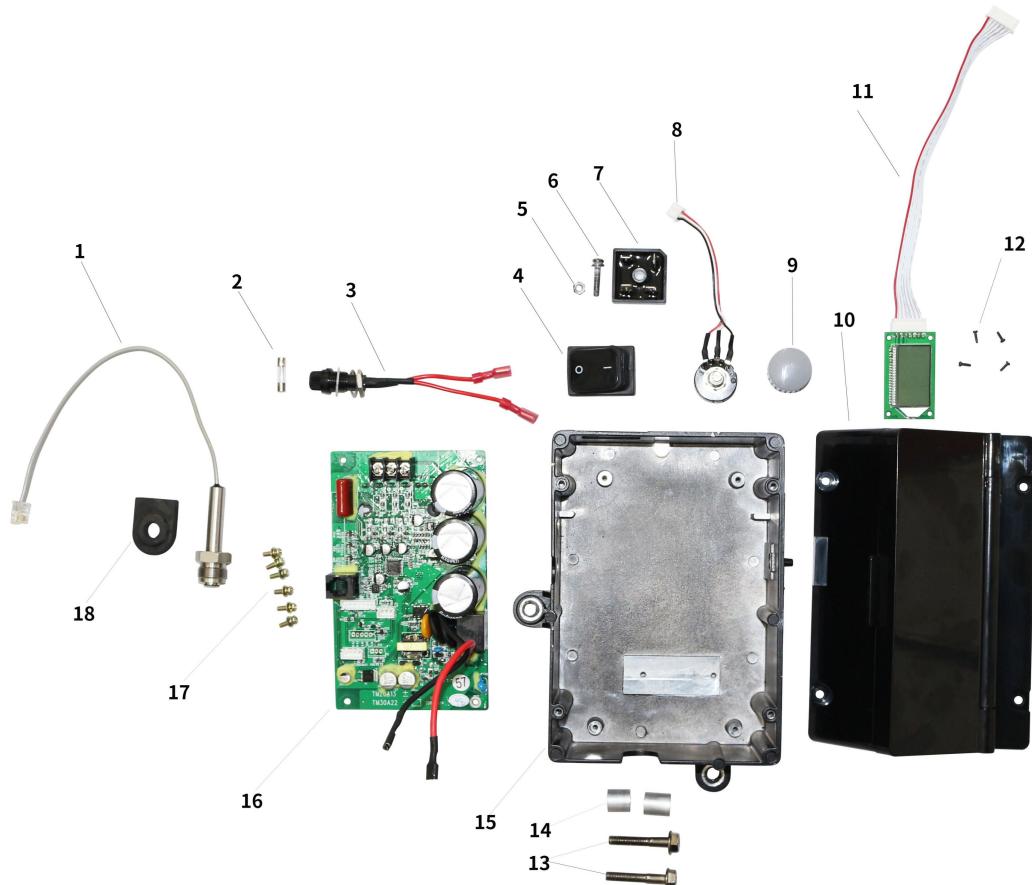




AIRLESS PAINT SPRAYER

Parts List

No.	Series No.	Description	Qty	No.	Series No.	Description	Qty
1	X24501	Transducer	1	10	X24510	Plastic Cover	1
2	X24502	Fuse	1	11	X24511	Circuit for Digital Pressure Display	1
3	X24503	Fuse Holder	1	12	X24512	Screw	4
4	X24504	Switch	1	13	X24613	Screw	2
5	X24505	Washer	1	14	X24614	Screw Pin	2
6	X24506	Screw	1	15	X24515	Base	1
7	X24507	Bridge	1	16	X24516	Circuit Board	1
8	X24508	Pressure Regulator	1	17	X24517	Screw	6
9	X24509	Pressure Regulator Cover	1	18	X24518	Screens	1

X24 Gear Box

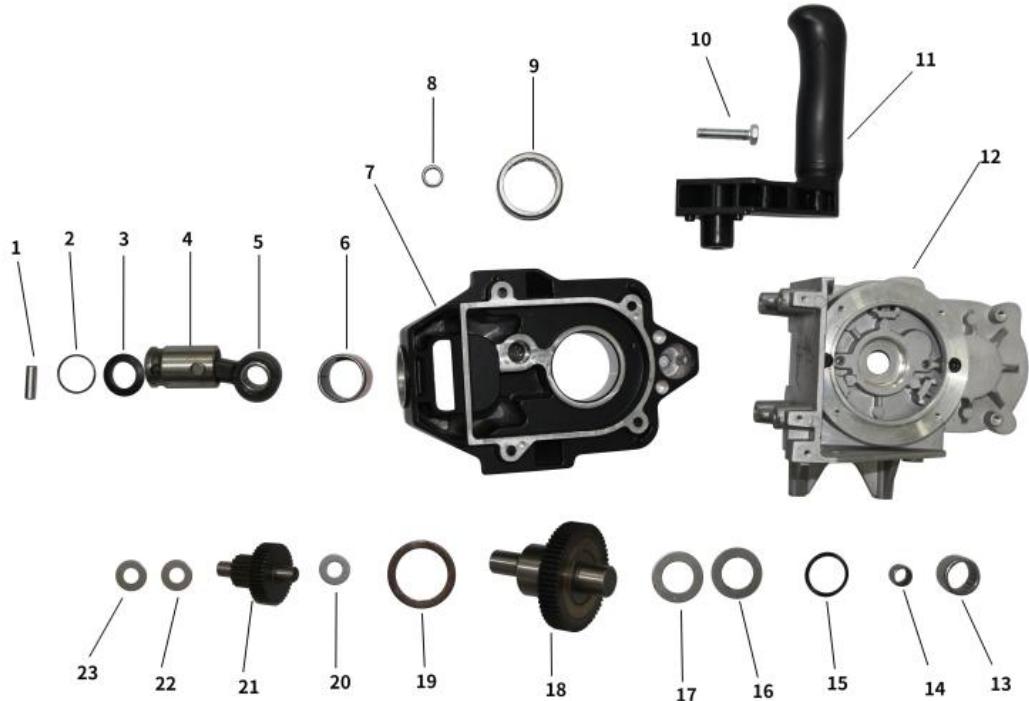

No.	Series No.	Description	Qty	No.	Series No.	Description	Qty
1	x24201	Pin	1	13	x24213	Bearing	1
2	x24202	Washer	1	14	x24214	Bearing	1
3	x24203	Washer, rubber	1	15	x24215	O-ring	1
4	x24204	Connecting rod	1	16	x24216	Washer	1
5	x24205	Needle bearing, connecting rod	1	17	x24217	Washer	1
6	x24206	Bearing	1	18	x24218	Gear, crankshaft	1




AIRLESS PAINT SPRAYER

Parts List

7	x24207	Drive housing	1		19	x24219	Washer	1
8	x24208	Bearing	1		20	x24220	Washer	1
9	x24209	Bearing	1		21	x24221	Gear, reducer	1
10	x24210	Screw	1		22	x24222	Washer	1
11	x24211	Handle	1		23	x24223	Washer	1
12	x24212	Cover, drive housing	1					

X24 Fluid pump

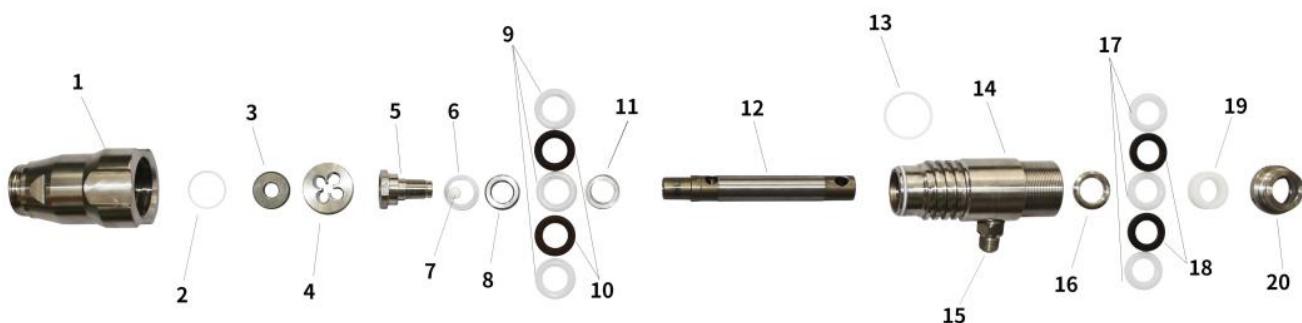


No.	Series No.	Description	Qty	No.	Series No.	Description	Qty
1	x24101	Lower housing	1	11	x24111	Gland, piston	1
2	x24102	O-ring	1	12	x24112	Piston rod	1
3	x24103	Carbide seat	1	13	x24113	O-ring	1
4	x24104	Ball guide	1	14	x24114	Cylinder	1
5	x24105	Piston valve	1	15	x24115	Outlet connector	1
6	x24106	Spacer	1	16	x24116	Gland, piston	1
7	x24107	Ball	1	17	x24117	V-packing, throat	3
8	x24108	Gland, piston	1	18	x24118	V-packing, leather, throat	2
9	x24109	V-packing, piston	3	19	x24119	Gland, throat	1
10	x24110	V-packing, leather, piston	2	20	x24220	Nut, packing	1



AIRLESS PAINT SPRAYER

Parts List

X24 Filter Housing

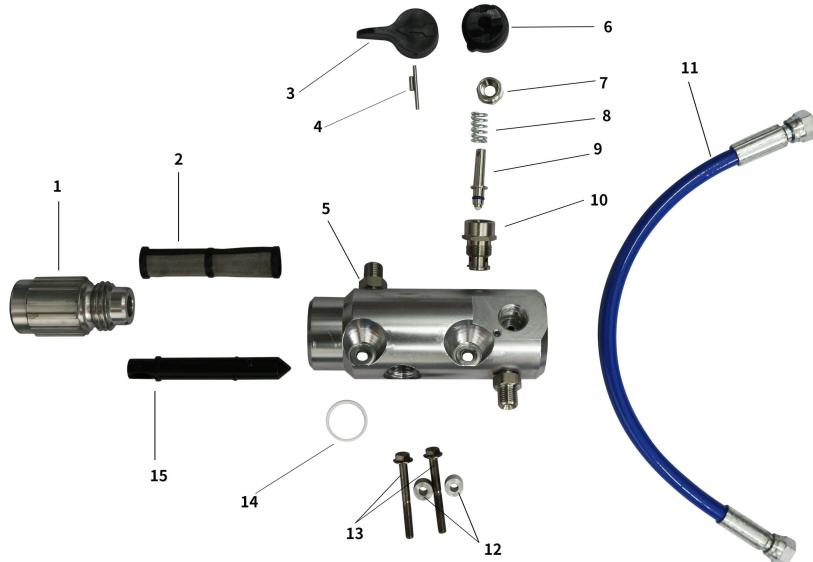

NO.	Series NO.	Description	Qty	NO.	Series NO.	Description	Qty
1	x24401	Manifold cap	1	9	x24409	Prime/spray valve stem	1
2	x24402	Pump filter	1	10	x24410	Prime/spray valve housing	1
3	x24403	Prime/spray valve handle	1	11	x24411	Hose	1
4	x24404	Prime/spray valve groove pin	1	12	x24412	Gasket	2
5	x24405	Manifold	1	13	x24413	Screw	2
6	x24406	Prime/spray valve base	1	14	x24414	O-ring	1
7	x24407	Prime/spray valve Gasket	1	15	x24415	Filter insert	1
8	x24408	Prime/spray valve Spring	1				

X24 Suction hose Assembly




NO.	Series NO.	Description	Qty
1	x24801	Retainer	1
2	x24802	Suction hose	1
3	x24803	Drain hose	1
4	x24804	Pump rod cover	1
5	x24805	Retainer	1
6	x24806	Screw	1
7	x24807	Suction filter	1



AIRLESS PAINT SPRAYER

Parts List

X24 Cart&Motor Cover Assembly

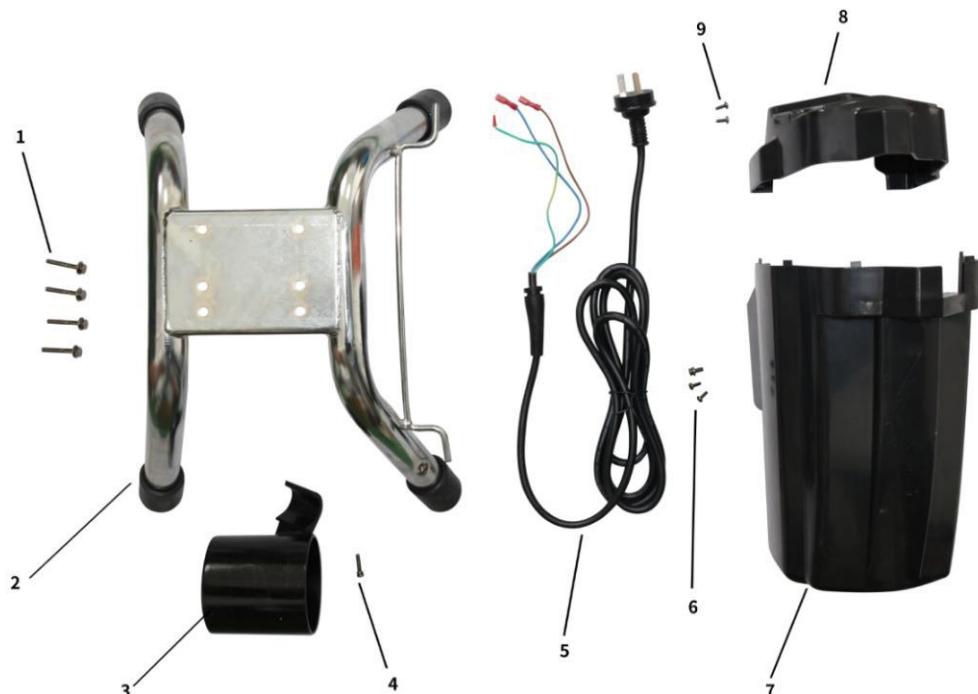

NO.	Series NO.	Description	Qty
1	x24701	Screw	4
2	x24702	Frame	1
3	x24703	Suction/drain cup	1
4	x24704	Screw	1
5	x24605	Power wire	1


NO.	Series NO.	Description	Qty
6	x24606	Screw	3
7	x24607	Motor cover	1
8	x24608	Front cover	1
9	x24609	Screw	2



AIRLESS PAINT SPRAYER

Parts List

X45 Motor&Gear Box Assembly

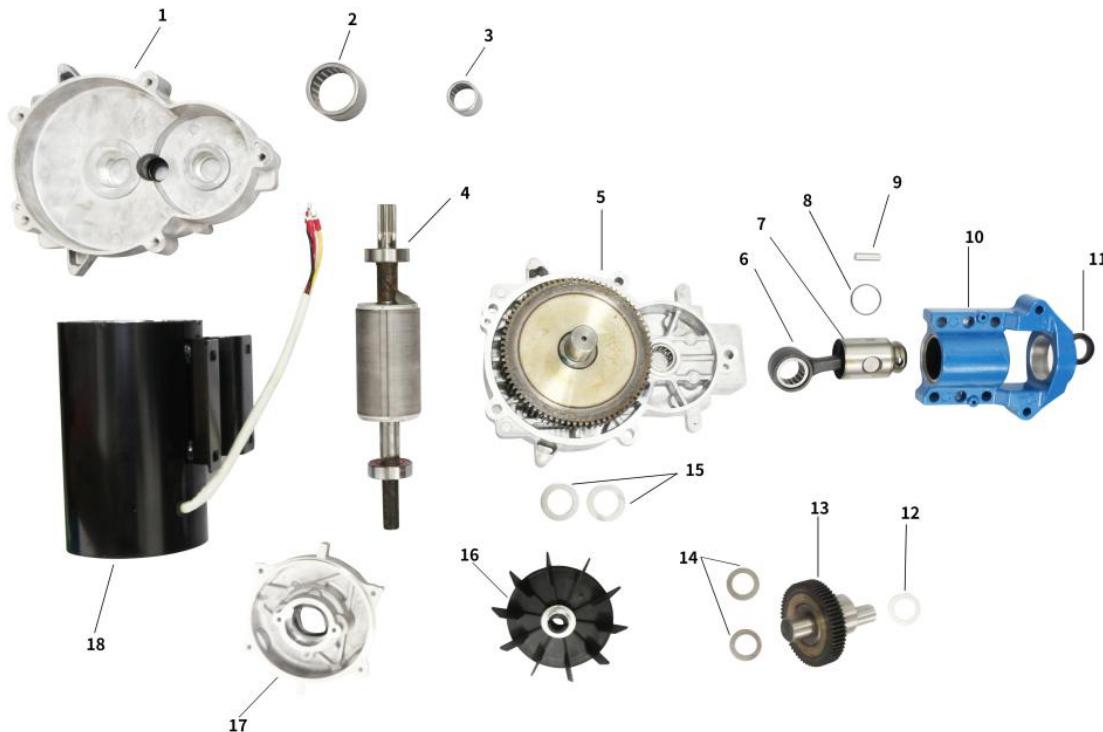

No.	Series No.	Description	Qty
1	x45201	Cover, gear box	1
2	x45202	Bearing	1
3	x45203	Bearing	1
4	x45204	Rotor	1
5	x45205	Gear box	1
6	x45206	Needle bearing, connecting rod	1
7	x45207	Connecting rod	1
8	x45208	O-ring	1
9	x45209	Pin	1


No.	Series No.	Description	Qty
10	x45210	Bearing housing	1
11	x45211	Washer	1
12	x45212	Washer	1
13	x45213	Gear, crankshaft	1
14	x45214	Washer	1
15	x45215	Washer	1
16	x45216	Fan, motor	1
17	x45217	Back cover, motor	1
18	x45218	Magnetic cylinder	1



AIRLESS PAINT SPRAYER

Parts List

X45 Electric Pressure Control Board&Filter housing assembly

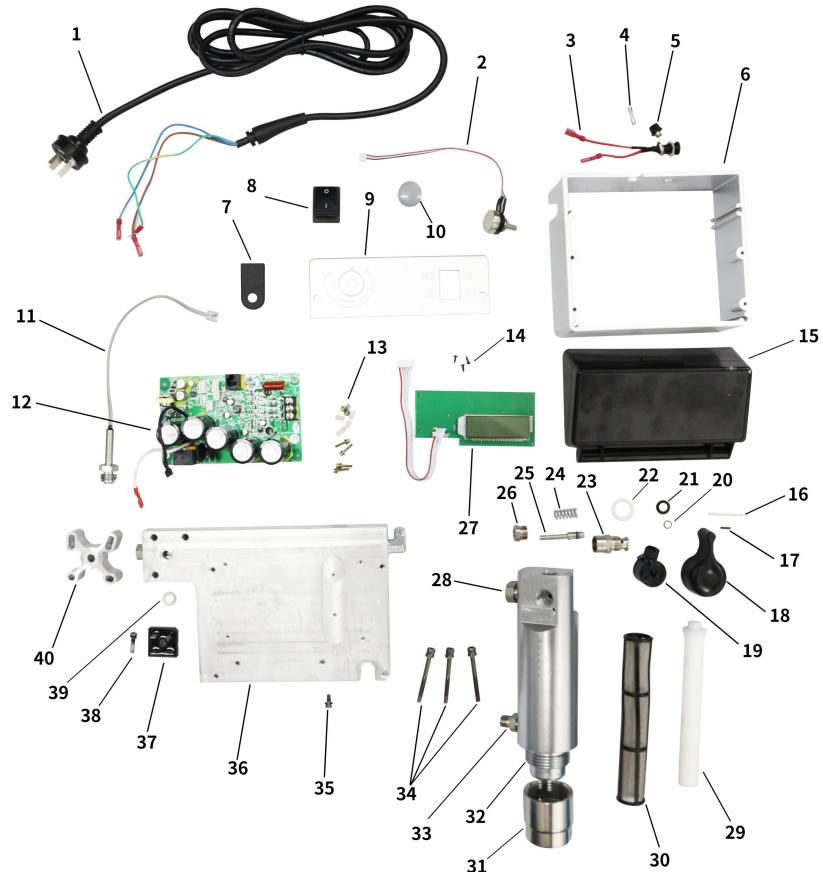

No.	Series No.	Description	Qty
1	X45501	Power Cord	1
2	X45502	Pressure Regulator	1
3	X45503	Fuse Holder	1
4	X45504	Fuse	1
5	X45505	Fuse Cap	1
6	X45506	Frame	1
7	X45507	Screens	1
8	X45508	Switch	1
9	X45509	Transparent Screen	1
10	X45510	Pressure Regulator Cover	1
11	X45511	Transducer	1
12	X45512	Circuit Board	1
13	X45513	Screw/Pin	10
14	X45514	Screw	3

No.	Series No.	Description	Qty
21	X45521	Washer	1
22	X45522	O-ring	1
23	X45523	Prime/Spray Valve Housing	1
24	X45524	Spring	1
25	X45525	Prime/Spray Valve Stem	1
26	X45526	Prime/Spray Valve Base	1
27	X45527	Circuit for Digital Pressure Display	1
28	X45528	Block Fitting	1
29	X45529	Manifold Filter Insert	1
30	X45530	Manifold Filter	1
31	X45531	Manifold Filter Base	1
32	X45532	Manifold Filter Housing	1
33	X45533	Outlet Fitting	1
34	X45534	Long Screw	3




AIRLESS PAINT SPRAYER

Parts List

15	X45515	Plastic Cover	1		35	X45535	Screw	1
16	X45516	Pin	1		36	X45536	Base	1
17	X45517	Pin	1		37	X45537	Bridge	1
18	X45518	Prime Valve Knob	1		38	X45538	Screw	1
19	X45519	Cam Base	1		39	X45539	Washer	1
20	X45520	Washer	1		40	X45540	Flange	1

X45 Fluid pump

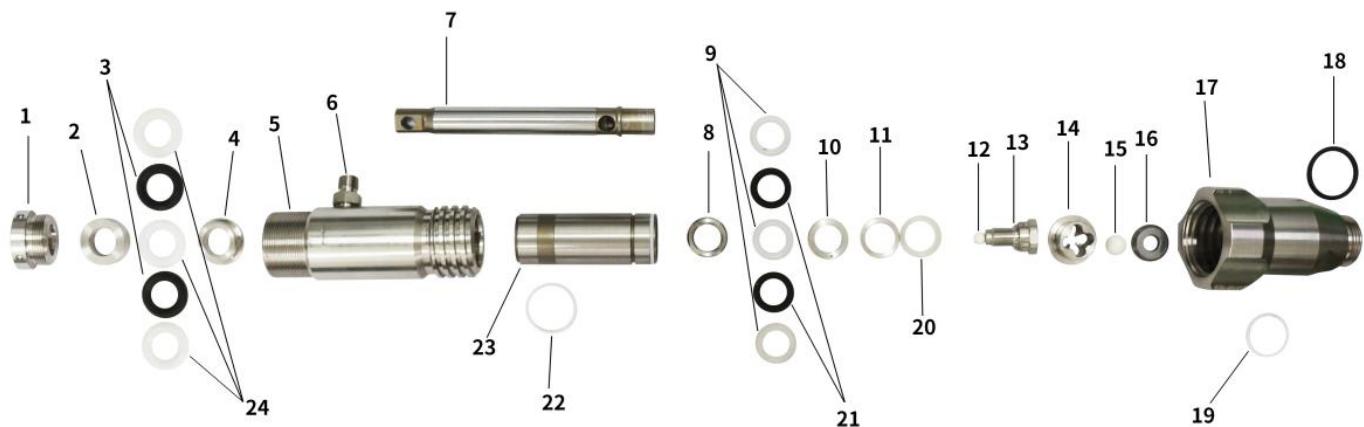


No.	Series No.	Description	Qty	No.	Series No.	Description	Qty
1	x45101	Nut, packing	1	13	x45113	Valve, piston	1
2	x45102	Seal	1	14	x45114	Ball guide	1
3	x45103	V-packing, throat	2	15	x45115	Ball, big	1
4	x45104	Gland, female	1	16	x45116	Carbide seat	1
5	x45105	Cylinder	1	17	x45117	Intake valve	1
6	x45106	Outlet connector	1	18	x45118	O-ring	1
7	x450107	Piston rod	1	19	x45119	O-ring	1
8	x45108	Gland, male	1	20	x45120	Washer	1
9	x45109	V-packing, piston	3	21	x45121	V-packing, leather, piston	2
10	x45110	Gland, piston	1	22	x45122	O-ring	1
11	x45111	Gland, piston	1	23	x45123	Sleeve, Cylinder	1
12	x45112	Ball, small	1	24	x45124	V-packing, throat	3



AIRLESS PAINT SPRAYER

Parts List

X45 Cart assembly

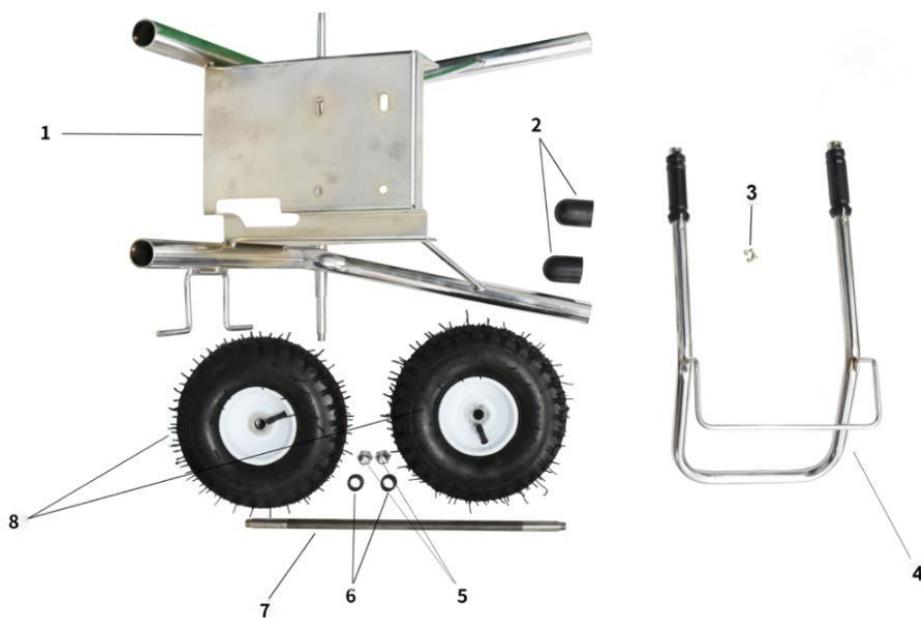

NO.	Series NO.	Description	Qty	NO.	Series NO.	Description	Qty
1	X45701	Cart	1	5	X45705	Nut	2
2	X45702	Tubing plug	2	6	X45706	Gasket	2
3	X45703	Screw	4	7	X45707	Tire connecting rod	1
4	X45704	Handle assembly	1	8	X45708	Wheel	2



AIRLESS PAINT SPRAYER


Parts List

X45 Motor Cover& accessories



NO.	Series NO.	Description	Qty	NO.	Series NO.	Description	Qty
1	X45801	Drain hose	1	7	X45707	Drain line clip	1
2	X45602	Motor cover	1	8	X45608	Screw	4
3	X45803	Screw	2	9	X45609	Gasket	2
4	X45804	Hose	1	10	X45610	Front cover	1
5	X45805	Suction tube	1	11	X45611	Pump rod cover	1
6	X45806	Suction filter	1	12	X45612	Screw	2


X51L Fluid Pump

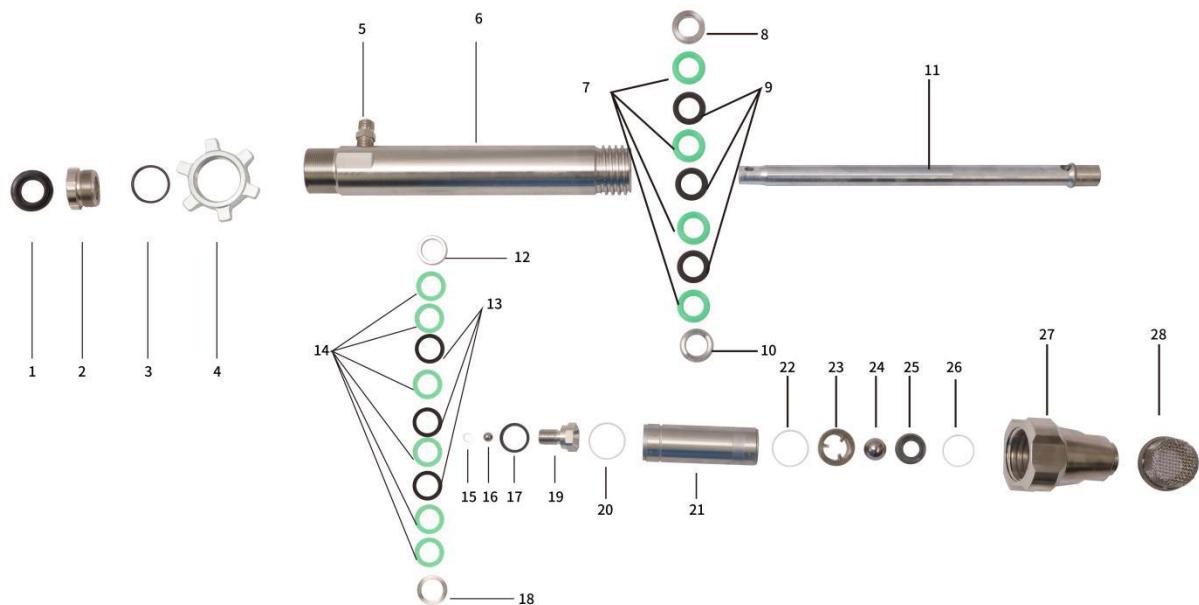

No.	Series No.	Description	QTY
1	X51101	SEAL, throat	1
2	X51102	NUT, packing	1
3	X51103	O-RING	1
4	X51104	NUT, retaining	1
5	X51105	ADAPTER	1
6	X51106	PUMP, displacement	1
7	X51107	V-PACKING, throat, green	4
8	X51108	GLAND, female, throat	1
9	X51109	V-PACKING, leather, throat	3
10	X51110	GLAND, male, throat	1
11	X51111	ROD, piston	1
12	X51112	GLAND, male, piston	1
13	X51113	V-PACKING, leather, throat	3
14	X51114	V-PACKING, throat, green	6
15	X51115	WIPER, piston	1
16	X51116	BALL, small	1
17	X51117	WASHER, backup	1
18	X51118	GLAND, female, piston	1
19	X51119	VALVE, piston	1
20	X51120	O-RING	1
21	X51121	SLEEVE, cylinder	1
22	X51122	O-RING	1
23	X51123	GUIDE, ball	1
24	X51124	BALL, inlet	1


25	X51125	CARBIDE SEAT	1
26	X51126	O-RING	1
27	X51127	VALVE, intake	1
28	X51128	STRAINER	1

X51L Electric Pressure Control Board

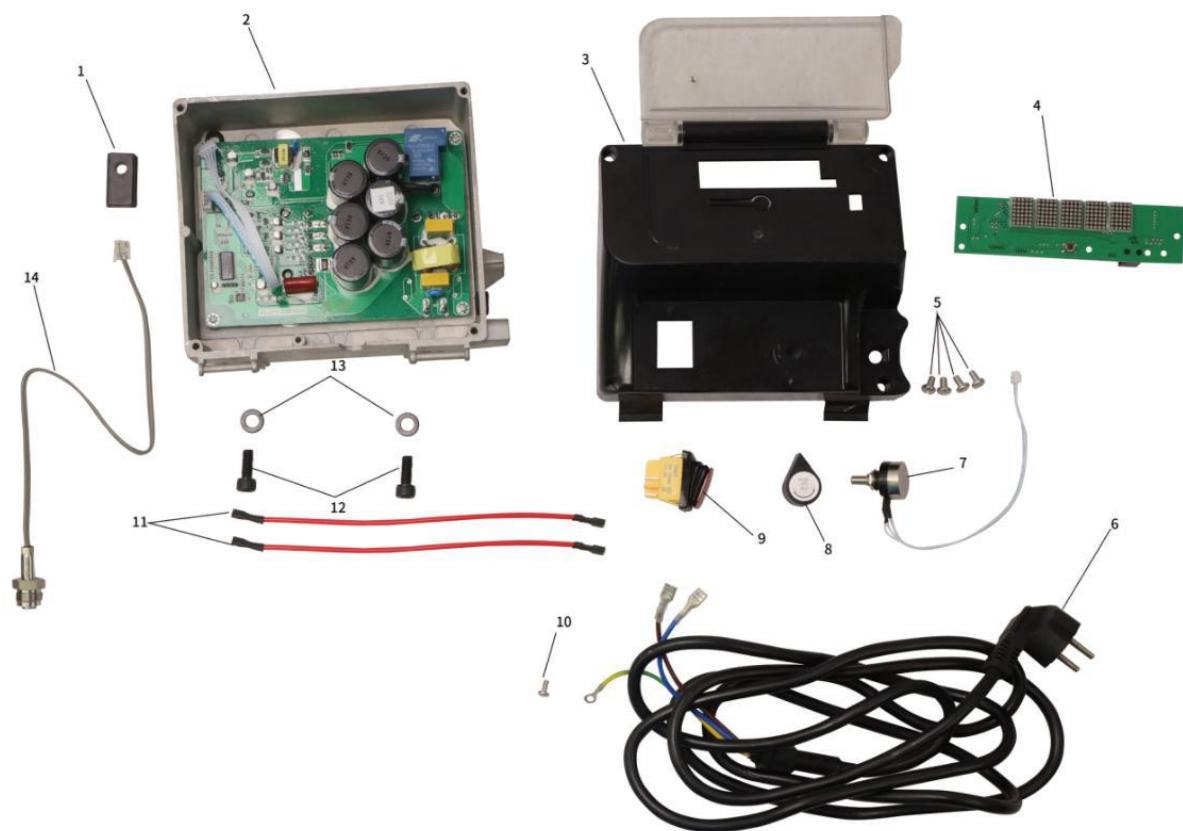

No.	Series No.	Description	QTY
1	X51201	COVER, waterproof	1
2	X51202	PCB, Control Board	1
3	X51203	COVER, control	1
4	X51204	DIGITAL DISPLAY BOARD	1
5	X51205	SCREW	4
6	X51206	POWER CODE	1
7	X51207	POTENTIOMETER, adjust pressure	1
8	X51208	KNOB, potentiometer	1
9	X51209	ON/OFF SWITCH	1
10	X51210	SCREW	1
11	X51211	WIRE	2
12	X51212	SCREW	2
13	X51213	GASKET	2
14	X51214	TRANSDUCER	1

X51L Motor Assembly

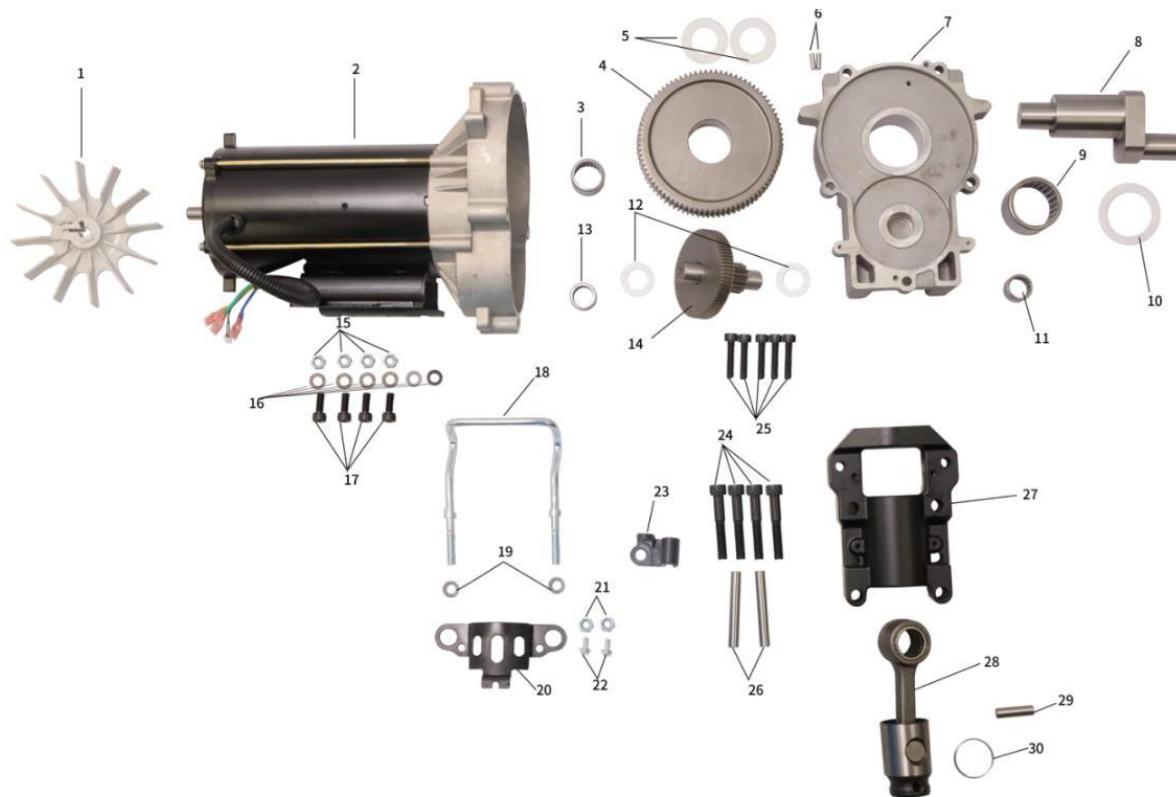

No.	Series No.	Description	QTY
1	X51301	FAN, motor	1
2	X51302	MOTOR, 3000W Brushless	1
3	X51303	BEARING	1
4	X51304	GEAR	1
5	X51305	GASKET	2
6	X51306	PIN	2
7	X51307	GEAR BOX	1
8	X51308	ECCENTRIC SHAFT	1
9	X51309	BEARING	1
10	X51310	GASKET	1
11	X51311	BEARING	1
12	X51312	GASKET	2
13	X51313	BEARING	1
14	X51314	GEAR	1
15	X51315	NUT	4
16	X51316	GASKET	5
17	X51317	SCREW	4
18	X51318	HANGER, pail	1
19	X51319	GASKET	2
20	X51320	SHIELD, pump rod	1

21	X51321	NUT	2
22	X51322	SCREW	2
23	X51323	CLIP, drain tube	1
24	X51324	SCREW	4
25	X51325	SCREW	5
26	X51326	PIN	2
27	X51327	HOUSING, bearing	1
28	X51328	ROD, connecting	1
29	X51329	PIN	1
30	X51330	SPRING, retaining	1

X51L Filter Housing




No.	Series No.	Description	QTY
1	X51401	TUBE, diffusion	1
2	X51402	FILTER, fluid, 60mesh	1
3	X51403	CAP, filter	1
4	X51404	O-RING	2
5	X51405	BASE, filter	1
6	X51406	ADAPTER	1
7	X51407	HANDLE, valve, drain	1
8	X51408	BASE, valve	1
9	X51409	VALVE, drain	1
10	X51410	ADAPTER	1
11	X51411	PIN, valve	1
12	X51412	SCREW	3

X51L Motor Cover Assembly



No.	Series No.	Description	QTY
1	X51501	SHIELD, motor	1
2	X51502	SCREW	6
3	X51503	COVER, front	1
4	X51504	TOOL BOX	1
5	X51505	HOSE	1
6	X51506	DRAIN HOSE	1
7	X51507	LUBRICATING OIL	1
8	X51508	TOOL, adjustable wrench	1
9	X51509	WRENCH	1
10	X51510	WRENCH	1
11	X51511	SCREWDRIVER	1


X80L Fluid Pump assembly

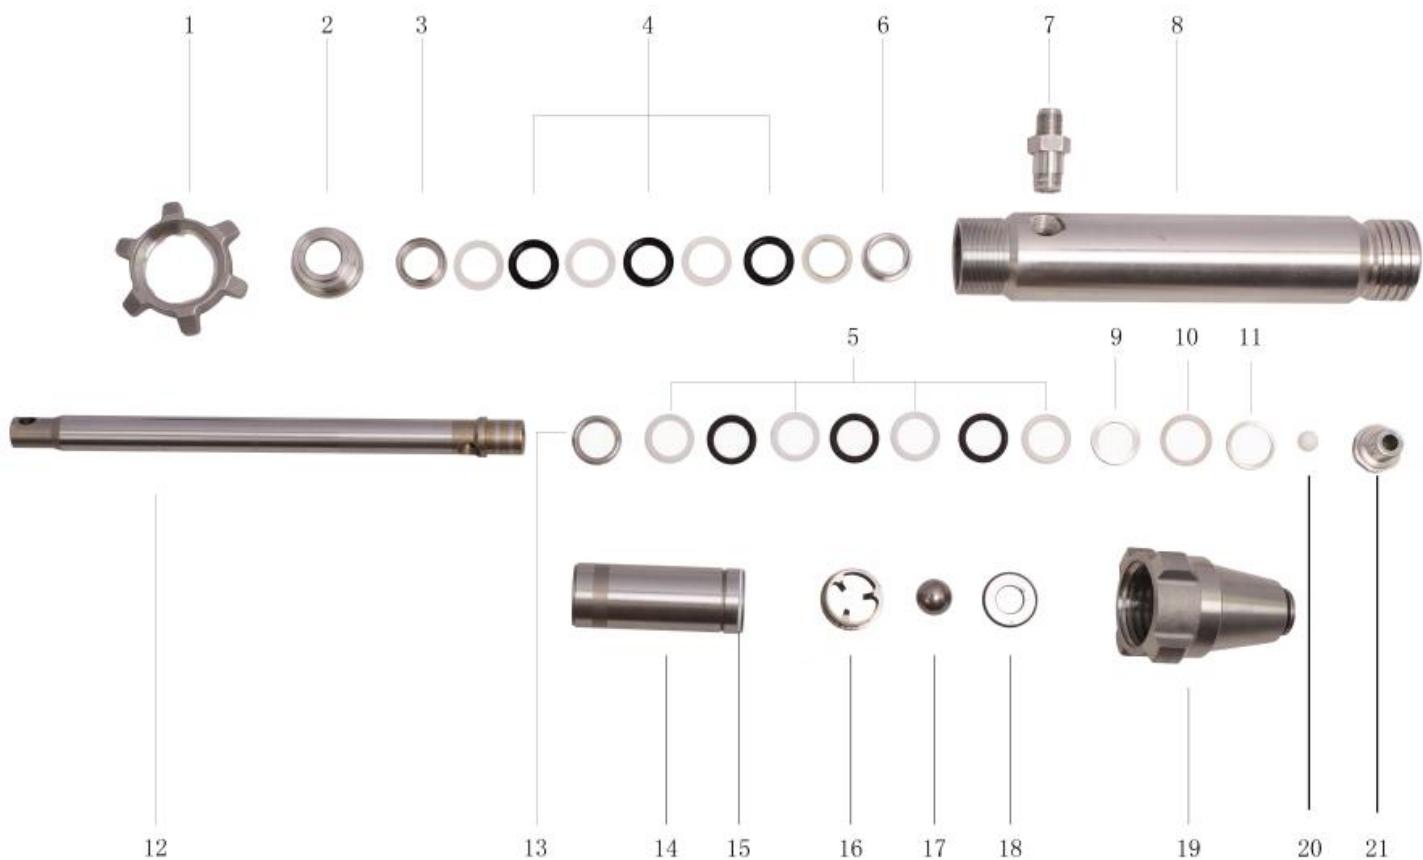

No.	Serial No.	Description	Qty
1	X80101	NUT, retaining	1
2	X80102	NUT, packing	1
3	X80103	Gland	1
4	X80104	V-packing, throat	7
5	X80105	V-packing, piston	7
6	X80106	Gland	1
7	X80107	Fitting, nipple, adapter	1
8	X80108	Cylinder, pump	1
9	X80109	Gland, female, piston	1
10	X801010	Wiper, piston	1
11	X801011	Washer	1

No.	Serial No.	Description	Qty
12	X801012	Piston rod	1
13	X801013	Gland, piston	1
14	X801014	Sleeve, cylinder	1
15	X801015	O-ring	1
16	X801016	Guide, ball	1
17	X801017	Ball	1
18	X801018	Carbide kit, seat	1
19	X801019	Valve, intake	1
20	X8010120	Ball	1
21	X8010121	Valve, piston	1

X80L Gear Box Assembly

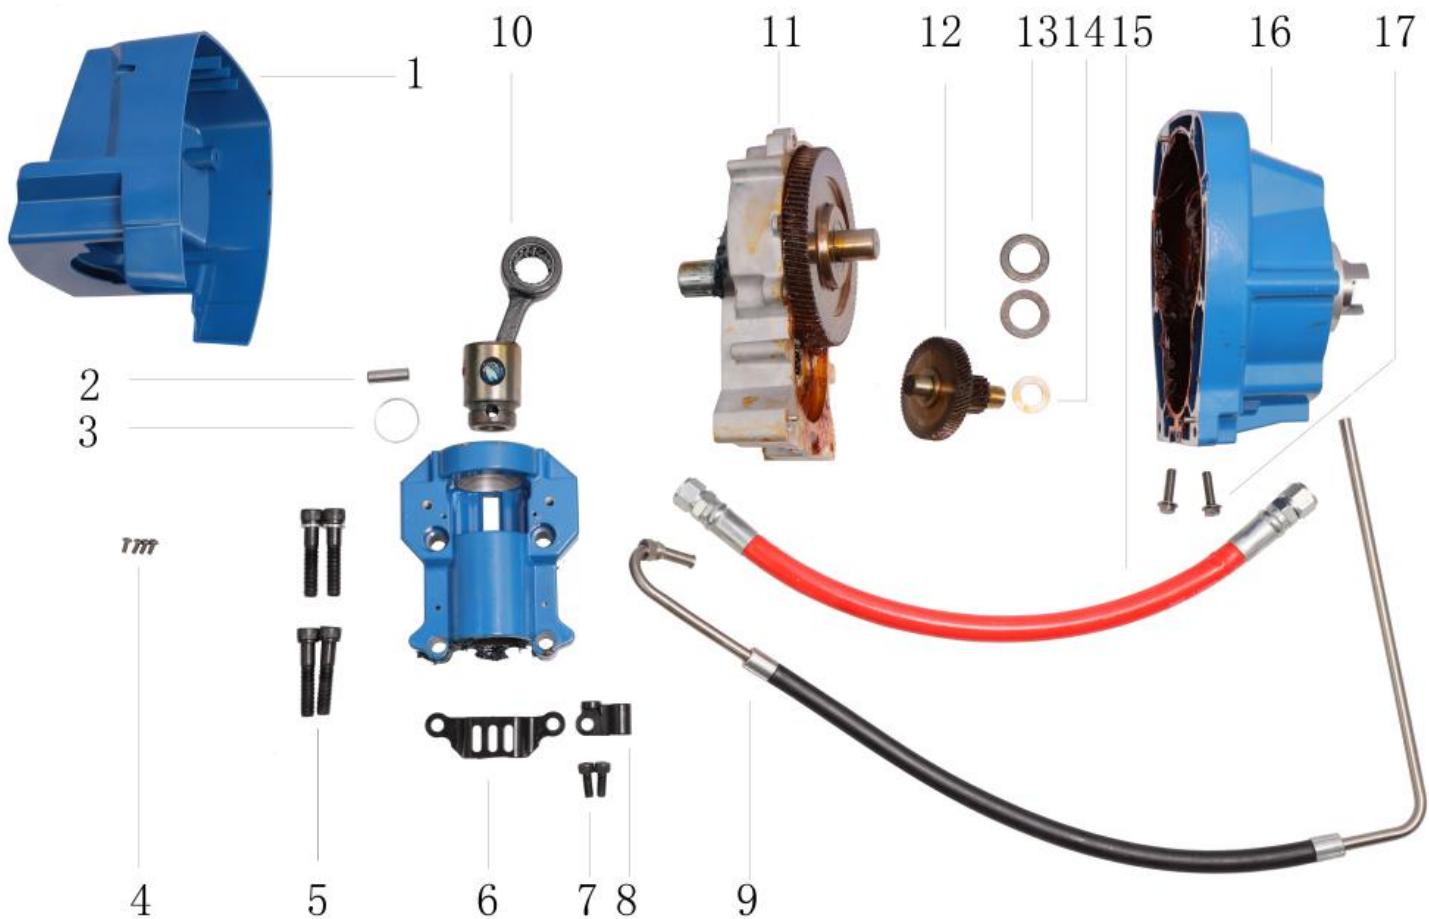

No.	Serial No.	Description	Qty
1	X80201	Pinion housing	1
2	X80202	Pin	1
3	X80203	O-ring	1
4	X80204	Screw	4
5	X80205	Screw	4
6	X80206	Cover, piston rod	1
7	X80207	Screw	2
8	X80208	Clip, drain line	1
9	X80209	Hose, drain	1


No.	Serial No.	Description	Qty
10	X80210	ROD, connecting	1
11	X80211	Pinion assembly	1
12	X80212	GEAR, combination	1
13	X80213	Washer	2
14	X80214	Washer, thrust	1
15	X80215	Hose, cpld	1
16	X80216	Drive housing	1
17	X80217	Screw	2
18	X80218	Bracket, pump	1

X80L Motor Assembly



No.	Serial No.	Description	Qty
1	X80301	Motor Assembly	1
2	X80302	Long Screw	6
3	X80303	Washer	1
4	X80304	Short Screw	1

No.	Serial No.	Description	Qty
5	X80305	Nut	4
6	X80306	Stem Nut	4
7	X80307	Screw	4
8	X80308	Washer	4

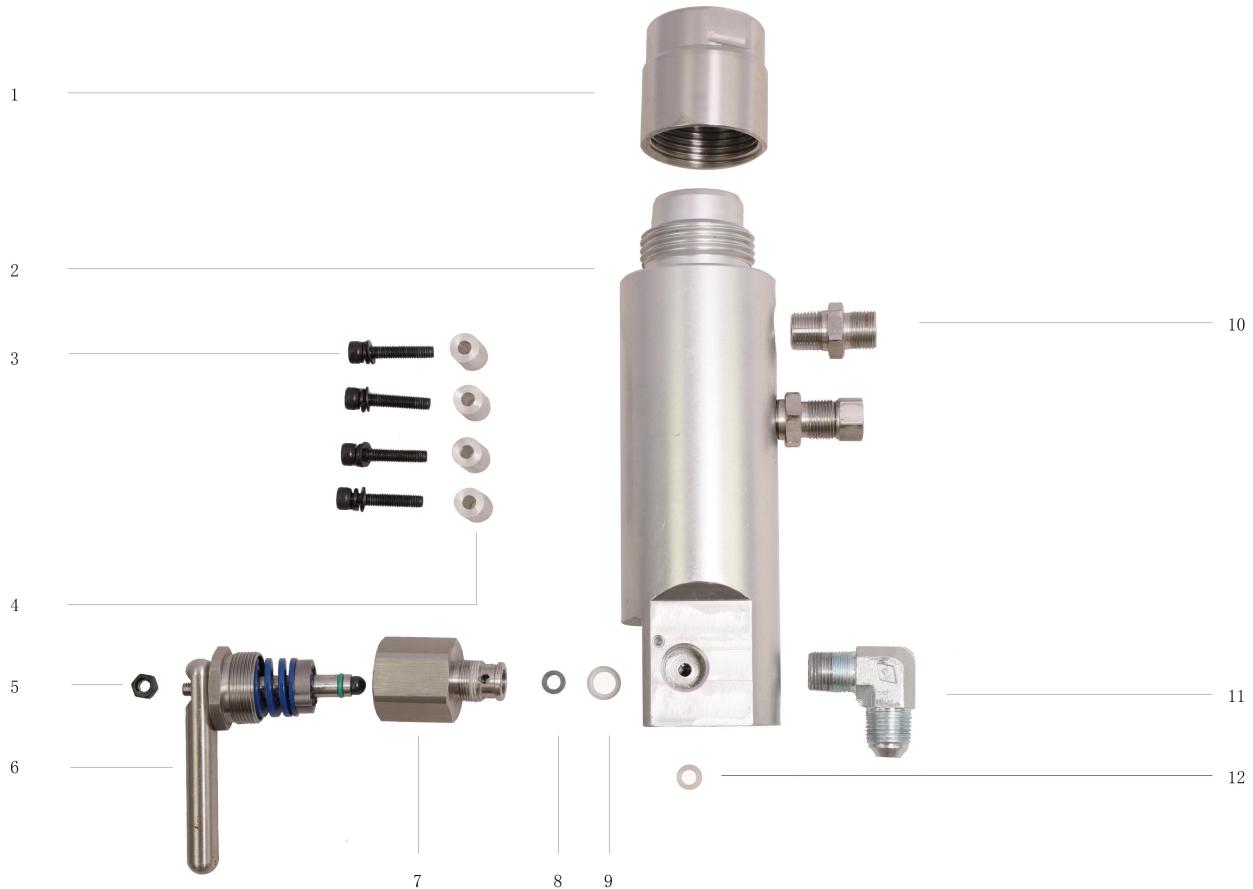


X80L Filter Housing Assembly

No.	Serial No.	Description	Qty
1	X80401	Manifold filter base	1
2	X80402	Manifold filter housing	1
3	X80403	Long screw	4
4	X80404	Screw support	4
5	X80405	Nut	1
6	X80406	Prime/Spray valve body	1

No.	Serial No.	Description	Qty
7	X80407	Prime/Spray valve housing	1
8	X80408	Tungsten steel Gasket	1
9	X80409	O-ring	1
10	X80410	Outlet fitting	1
11	X80411	Connector	1
12	X80412	O-ring	1

X80L PCB Assembly

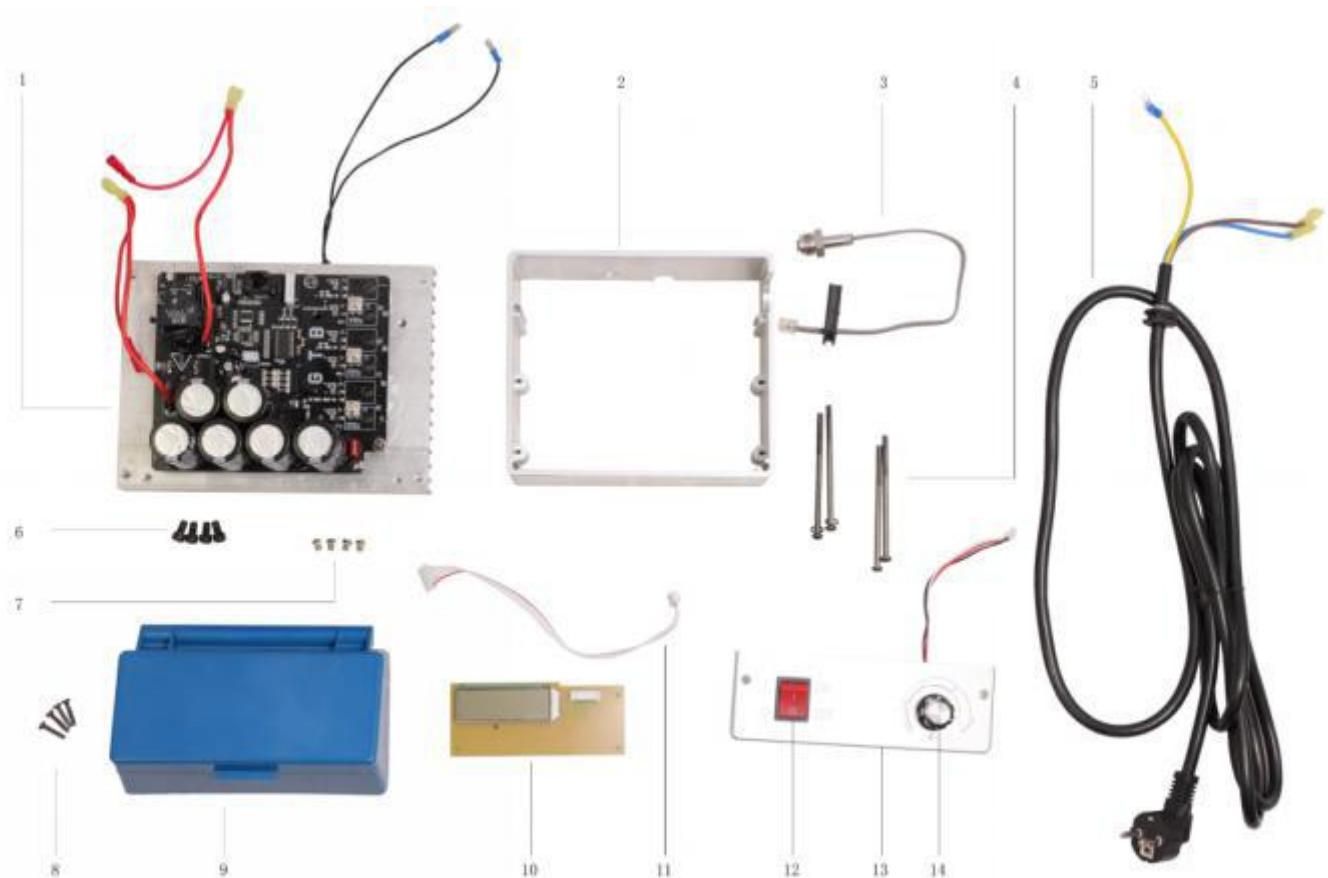

No.	Serial No.	Description	Qty
1	X80501	Circuit Board	1
2	X80502	Frame	1
3	X80503	Transducer	1
4	X80504	Long Screw	1
5	X80505	Power Cord	1
6	X80506	Screw	4
7	X80507	Screw	4

No.	Serial No.	Description	Qty
8	X80508	Screw	4
9	X80509	Plastic Cover	1
10	X80510	Circuit for Digital Pressure Display	1
11	X80511	Wire	1
12	X80512	Switch	1
13	X80513	Panel	1
14	X80514	Pressure Regulator	1

X80 Cart Assembly



NO.	Series NO.	Description	Qty
1	X80601	Handle assembly	1
2	X80601	Wheel	2
3	X80601	Cart	1
4	X80601	Nut	2